



SUB2 causes and methods of investigation

Description

If the protection circuit is activated, here are possible causes and how to deal with them.

Description	When the protection circuit is activated, the buzzer sounds, the protection circuit activation indicator on the power amplifier system controller (SA-150) lights up, the protection circuit item is displayed on the 7-segment display, and the equipment automatically stops.
Target series	i-series/J-series /K-series (SA-150), A-series (SA-160)

SA-150



SA-160



- 1. 7-segment display showing protective circuit items
- 2. Protection circuit operation indicator light
- 3. Reset switch
- 4. Emergency stop button

Error cause and remedy

Display when it occurs



● SUB SYSTEM
Protection circuit light


Error	Primary air pressure
Cause	Abnormal primary air pressure

An error occurs if the primary air pressure is lower than the specified value while the POWER ON switch of the system controller is pressed. Check the air pressure of equipment such as air compressors.

[How to check the primary air pressure]

The specified pressure value is indicated on the air pressure meter of the vibration generator.

*The position of the air pressure meter varies depending on the device.

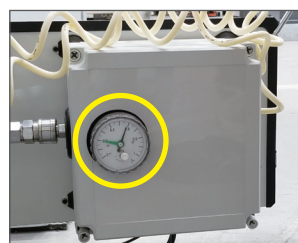

If the problem cannot be resolved, the vibration test system may be faulty. Please contact the IMV Service Centre.



Inquiries