

**IMV CORPORATION** 

Head Office e-mail info-global@imv-corp.com web https://we-are-imv.com/en/

\*The specifications and design are subject to change without notice.

### Global version



# World's leading supplier of high reliability vibration test systems

## Wide range of industries benefit through quality and reliability improvements

Since it was founded in 1957, IMV has been proud to be at the forefront of research and development in vibration testing systems, supplying technically-advanced systems, with safety and reliability as first priorities.

The range of IMV vibration-test systems includes single-axis and simultaneous multi-axis systems for up to six degrees of freedom simulation. A range of vibration and diagnostic instruments are also available. Engineering consultancy services to assist customers with vibration measurement, analysis and testing can also be provided.

IMV designs, manufactures, markets and maintains vibration test systems which simulate actual vibration environments, and measuring systems which record and analyse vibration created or experienced by a product. IMV can also provide test laboratory and consultancy services.

We are proud to be contributing to the safety and reliability of a wide range of products by working with the automotive, aerospace, electrical machinery and structural engineering industries to solve problems caused by vibration.

Our policy is to continue to develop our skills and products to ensure we continue to provide the best possible service to our clients.







### INDEX

Series Arrangements	» P.03
[Basic Systems] Vibration Test Systems	
Ecology	» P.07
High Grade Range A-series	» P.09
Large Displacement Range J-series	» P.13
Standard Range i-series	» P.15
Transportation Test Range C-series	» P.17
High Excitation Force Water Cooled Range K-series	s» P.19
Low Acoustic Noise and Compact Range m-series	» P.21
High Frequency and Compact Range VSH/PET	» P.23
Optional Units	» P.25
[Multi axis systems] Vibration Test System	10

[iviuiti-axi	S Systems with	Jianon	iest bystem		
2-Axis Char	ngeover Systems	DC-serie	es	>>	P.35
3-Axis Char	ngeover Systems	TC-serie	es	>>	P.36
2-Axis Simu	Iltaneous System	s DS-se	ries	>>	P.37
3-Avis Simi	Iltaneous System	s TS-sei	ries	55	P38

#### [Environmental Test Systems] Vibration Test System

6 Degrees of Freedom Systems TTS-series

Chamber for Vertical Excitation	» P.42
Chamber for both Vertical and Horizontal Excitation	» P.43
Chamber for Multi-Axis Excitation	» P.45
Prefabricated Chamber for Large Specimens	» P.46
Climatic Chamber Controllers	» P.47
Option	» P.48

#### [Vibration Controller] K2+

Vibration Controller K2+

» P.50

 $\gg P39$ 



\_\_\_\_






[Case Studies]	
Automotive Parts	» P.56
Electronic Parts	» P.61
Transportation Test	» P.62
Construction Machinery	» P.63
Earthquake Resistance	» P.64
Aerospace	» P.65
Other Applications	» P.66
Technical Guidance	» P.67
Conversion Table	» P.74
Related Products	» P.75
Export of Products	» P.76
IMV Test Lab Network	» P.77
Coverage	» P.79
System Layout	>> P80

# **Series Arrangements**

Vibration Test Systems Lineup Chart

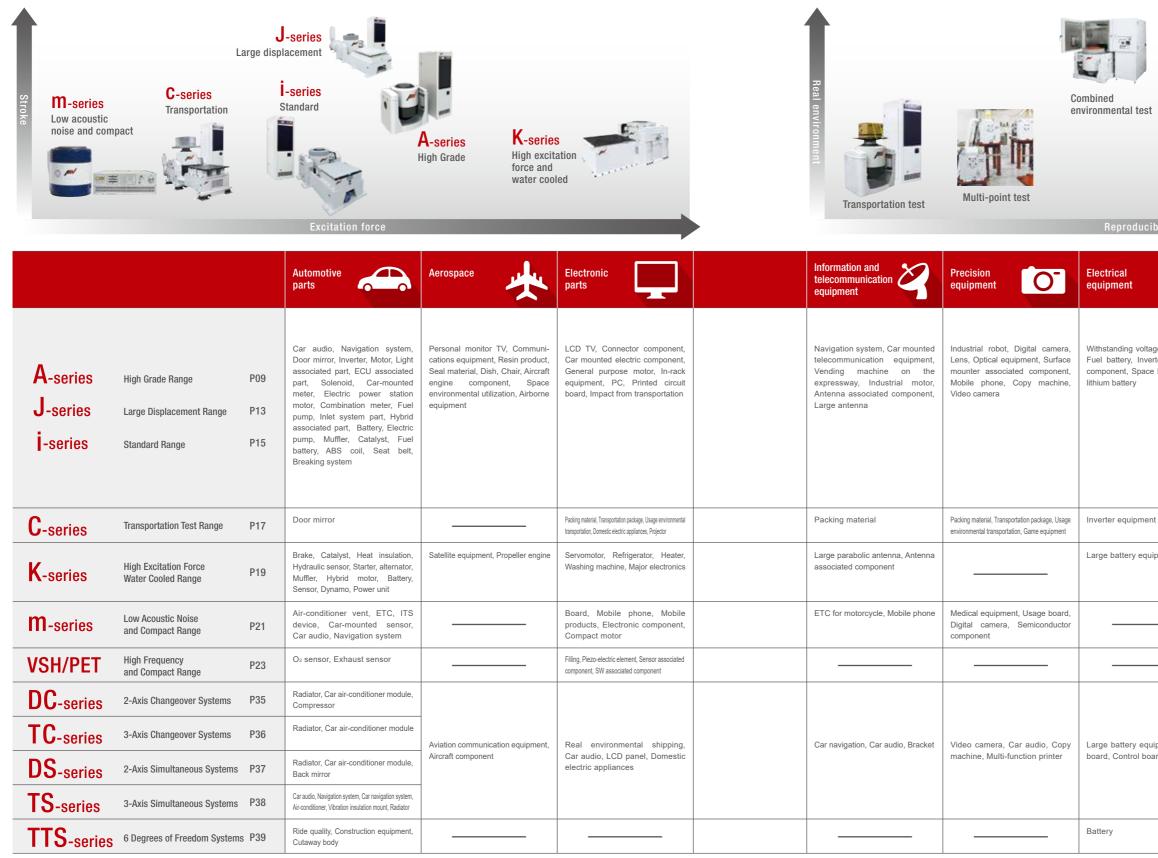



Multi-axis combined test





6 degrees of freedom test

oility

	Transportation environment	Usage environment
ge transformer, rter associated battery, Large	Rail vehicle component, Construction equipment, Shipping on a rough road	Combination meter, Instrumental panel associated component, Solar system, Other car-mounted component, PC
ıt	Transportation for medicine	Packing material
ipment	Rail vehicle component, Railway component	Display
		Structure(miniature)
ipment, Power ard	Cushioning material, Packing material, Transportation equipment	Earthquake simulation system, Earthquake resistance test system
		Cabin for construction equipment

# Vibration Test Systems Basic Systems

High Grade Range	A-series	» P.09
Large Displacement Range	J-series	» P.13
Standard Range	-series	» P.15
Transportation Test Range	C-series	» P.17
High Excitation Force Water Cooled Range	K-series	» P.19
Low Acoustic Noise and Compact Range	<b>M</b> -series	» P.21
High Frequency and Compact Range	VSH/PET	» P.23
Optional Units		» P.25

#### Approach to low noise

Careful attention to the design of the top cover using airflow modeling reduces the air velocity and the resulting acoustic noise.



#### Upper (armature) support system PS Guide


High vibration levels intensity places extreme stress on the main parts of the vibration generator. The Parallel Slope Guide (PSG) uses a patented design to achieve a highly durable armature support which also gives excellent performance. The design

provides sufficient stiffness to cross-axis forces and produces low distortion at all levels of vibration.



#### One of the world's largest class air-cooled shaker systems

By taking advantage of the latest finite-element analysis tools, the magnetic circuit and cooling designs used in the IMV air-cooled range enable higher force ratings (to 74 kN) to be achieved. Air-cooled systems are lower cost both to install and to maintain compared to water-cooled systems.

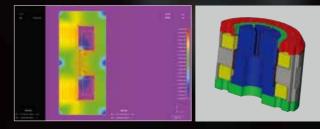

)5

Simple confirmation of reduction of CO2 and electricity consumption

When combined with the IMV 'K2' vibration controller, the ECO-shaker system computes and displays electricity savings in real-time. A report of energy consumption can be produced after each test.

Energy-saving results screen





Environmentally-friendly vibration systems

### Automatic energy saving

ECO-shaker is an electrodynamic vibration test system in which the output of the power amplifier, power input to the vibration generator and cooling blower speed are automatically optimised, according to the payload and test requirements. Complicated manual settings are no longer needed. Changes in the operating environment or in test level are accommodated without operator intervention.



Vibration controller K2+

#### [Features]

achieved.

Calculation

method

Conditions

- · Only vibration test pattern need to be set
- · Automatic response to changes in sample under test or test level
- · Continuous monitoring of temperatures used to control blower speed

The lower the system output, the more energy saving can be


of our i250/SA4M (Maximum force 32 kN)

1) Random 2) Average operating output: 25 %

3) Average operating ratio per year: 70 % ults may vary for systems, test conditions and cases

\*Operation condition selection system and method (JP Patent No. 4231095) \*Operation condition selection system and program (JP Patent No. 4263229)

### Effect of energy saving

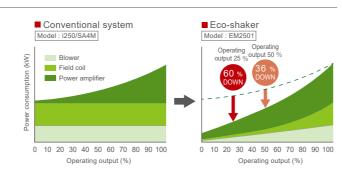

Comparison of power consumption with the conventional system


### Operation of ISM-EM (Power consumption)

Calculation of CO<sub>2</sub> reduction, referring to actual data

Minimising the energy consumption of a conventional vibration test system would require complex calculation and adjustments to suit the test requirements. The Integrated Shaker Manager (ISM-EM) technology incorporated within the ECO-shaker system automatically controls the power amplifier output, field level and blower speed to achieve the maximum efficiency under all test conditions.

Save up to 80 % on your running costs

Reduce yout  $CO_2$  emissions by up to 80 %

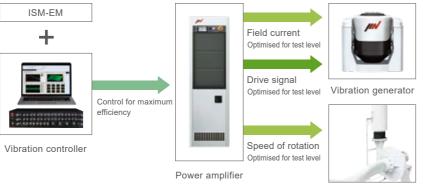





ISM-EM technology can be added to existing IMV vibration test systems by installing the ISM-EM module and additional software. Contact IMV or your local distributor for further information and delivery





Existing system

Example design

### Improvement of working conditions

Ensuring the vibration system is operating efficiently not only saves money; it also can reduce noise levels and heat dissipation into the workplace. This improves the working environment and can simplify initial installation.



Vibration Test Systems Basic Syste

#### Energy saving type vibration test system [ECO-Shaker]

Vibration test systems consume a lot of electricity. IMV has developed environmentally friendly products which minimise the required electric power and cut down electric consumption and CO2 emissions. Due to the great contribution to the promotion of efficient use of energy, the technology of ECO-Shaker received the Chairman's award from The Machinery Federation in 2012.



ISM-EM EM:Energy Manager

### Contribution to the environment

Many countries have legislated, such as the Clean Development Mechanism in the Kyoto Protocol, and the EU Energy Efficiency Directive, obliging businesses and their products to be more energy-efficient. The IMV ECO-shaker systems help to meet these regulations.

# **A**-series High Grade Range



### A new standard created by listening to our customers.

A wider range of test requirements and higher test specifications. A-series meets the needs for such a versatile test environment. Advanced automatic energy saving, high level of functionality and a protected test environment. A-series improves the working environment of vibration testing.

[Improvement of performance] [User friendly and Secure] [User first principle]


### Improvement of performance

#### A-series meets the demand

A wider range of test requirements and higher test specifications. A-series meets the needs for such a versatile test environment.


Improvement in excitation force

When compared with the conventional i- & J-series, the A-series has increased relative excitation force. Increased force per system power requirement Increased force per system mass •Increased force per system size

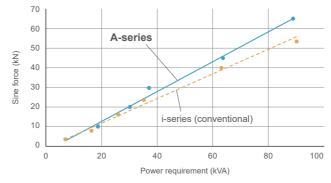


#### Increase in frequency range

In addition to the increased displacement of 76.2 mmp-p, the maximum frequency range is also increased when compared to the i-, and J-series.

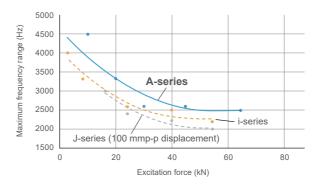


High velocity shock testing

Where a test requires a high shock velocity, traditional shaker systems use a matching transformer to achieve the necessary higher armature voltage. Since IMV's ECO-system has complete control over the field level, the field value can be adjusted to increase the maximum shock velocity capability of the system. By entering the specified shock profile into IMV's K2 controller. The field level in the shaker is automatically adjusted to ensure that the required velocity is achieved. A-series (EM amplifier model) provides a maximum of 3.5 m/s shock velocity testing.

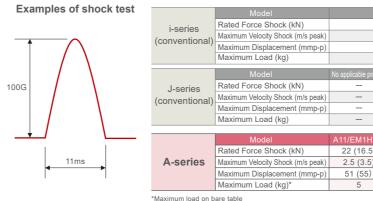

Standard 76.2 mmp-p displacement \*Only for A30, A45, A65, A74 A-series has a displacement of 76.2 mmp-p (3-inch stroke), which provides a good balance within the specifications for velocity, acceleration and displacement.

This single system can be used for a very wide variety of tests.






J-series (conventional 100 mmp-p displacement

#### Introduction of new power module

51 mmp-p displacement

By developing a power amplifier that uses a new next generation Silicon Carbide power module, IMV has achieved low noise and high efficiency. This new power module is standard-issue for all A-series models.

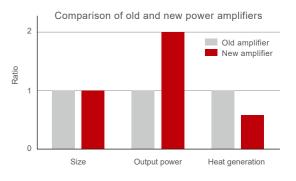

i220/SA1HAG									
		1	6						
		2	.2						
		5	1						
Not achievable (not enough velocity and displacement)									
cable product	J230/SA3HAG	J240/SA4HAG	J250/SA6HAG	J260/SA7HAG	No applicable product				
-	40	55	80	108	-				
-	2.4	2.4	2.4	2.4	-				
-	100	100 100 100		100	-				
-	No	ot achievable (no	ot enough veloci	ty)	-				
EM1HAG	A22/EM2HAG	A30/EM3HAG	A45/EM4HAG	A65/EM5HAG	A74/EM8HAG				
(16.5)	44 (36)	60 (50)	90 (80)	130 (120)	180 (160)				
5 (3.5)	2.5 (3.5)	2.5 (3.5)	2.5 (3.5)	2.5 (3.5)	2.5 (3.5)				
(55)	51 (55)	76.2	76.2	76.2	76.2				

#### User friendly and Secure


#### **A-series changes**

Advanced automatic energy saving, high level of functionality and a protected test environment. A-series improves the working environment of vibration testing.

#### Lower power consumption

In comparison with the same class of conventional systems (i, J-series), the A-series achieves lower power consumption. With an automatic energysaving function, increased energy saving is achieved across all force ranges.

#### Comparison of consumed power per excitation force A65 vs i260

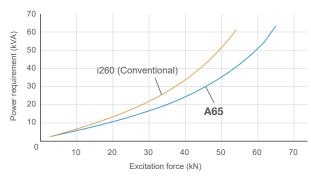



No risk of electric shock




No risk of electric shock

Optional built-in vibration controller \*Only for A12, A22, C10

It is possible to save the space by incorporating PC, display and keyboard for vibration controller into the power amplifier. The keyboard can be stored when it is not used.

\*Display size is 17 inch \*Keyboard with numeric keypad




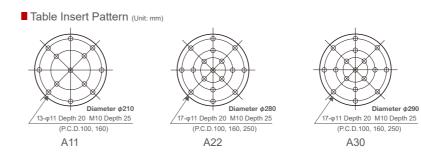

#### Specifications

			A11/ SA1HAG	A11/ EM1HAG	A22/ SA2HAG	A22/ EM2HAG	A30/ SA3HAG	A30/ EM3HAG	A45/ SA4HAG	A45/ EM4HAG	A65∕ SA5HAG*®	A65/ EM5HAG*8	A74/ EM6HAG*8	A74/ EM8HAG
	Frequen	icy Range (Hz)	0-4500*5	0-4500*5	0-3300	0-3300	0-2600	0-2600	0-2600	0-2600	0-2600*6	0-2600*6	0-2600*6	0-2600*
		Sine (kN)	11	11	22	22	30	30	45	45	65	65	74	74
	Rated	Random (kN rms)*1	11	11	22	22	30	30	45	45	65	65	74	74
	Force	Shock (kN)	22	22	44	44	60	60	90	90	130	130	148	180
		High Velocity Shock (kN)	-	16.5	-	36	-	50	-	80	-	120	120	160
		Sine (m/s <sup>2</sup> )	1000	1000	1000	1000	900	900	900	900	900	900	1000	1000
	Maximum	Random (m/s <sup>2</sup> rms)	630	630	630	630	630	630	630	630	630	630	630	630
System	Acc.	Shock (m/s <sup>2</sup> peak)	2000	2000	2000	2000	1818	1818	1800	1800	1806	1806	2000	2000
pecifications	s	High Velocity Shock (m/s <sup>2</sup> peak)	-	1500	-	1636	-	1515	-	1600	-	1666	1621	2000
		Sine (m/s)	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
	Maximum Vel.	Shock (m/s peak)	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
	VCI.	High Velocity Shock (m/s peak)	-	3.5	-	3.5	-	3.5	-	3.5	-	3.5	3.5	3.5
	Maximum	Sine (mmp-p)	51	51	51	51	76.2	76.2	76.2	76.2	76.2	76.2	76.2	76.2
	Disp.	High Velocity Shock (mmp-p)	-	55	-	55	-	76.2	-	76.2	-	76.2	76.2	76.2
	Maximur	n Travel (mmp-p)	64	64	64	64	82	82	82	82	82	82	82	82
	Maximur	n Load (kg)	200	200	300	300	400	400	600	600	1000	1000	1000	1000
	Power Re	Power Requirements (kVA)*2		20.4	30	30	36	36	57	57	83	83	118	118
	Breaker Capacity (A)		75*3	75*3	100*3	100*3	125*3	125*3	200*3	200*3	300*3	300*3	250*4	250*4
	Model		A11	A11	A22	A22	A30	A30	A45	A45	A65	A65	A74	A74
	Armatur	Armature Mass (kg)		11	22	22	33	33	50	50	72	72	74	74
	Armature	Armature Diameter (		210	280	280	290	290	436	436	446	446	446	446
Vibration	Allowable	Allowable Eccentric Moment (N+m)		294	700	700	850	850	1550	1550	1550	1550	1550	1550
Generator	Dimensions (mm) W × H × D		946 × 827 × 676	946 × 827 × 676	1038 × 955 × 775	1038 × 955 × 775	1100 × 1048 × 840	1100 × 1048 × 840	1232 × 1215 × 1040	1232 × 1215 × 1040	1310 × 1253 × 1040	1310 × 1253 × 1040	1310 × 1253 × 1040	1310 1253 1040
	Shaker E	Body Diameter (φmm)	585	585	678	678	725	725	825	825	925	925	925	925
	Mass (kg	g)	1080	1080	1600	1600	2100	2100	3200	3200	4200	4200	4200	4200
	Model*9		1□GH1-A11	2□GH1-A11	1 GH2-A22	2_GH2-A22	1_GH3-A30	2□GH3-A30	1_GH4-A45	2□GH4-A45	1_GH5-A65	2□GH5-A65	2□GH6-A74	2□GH8-A
	Maximur	n Output (kVA)	12	12	24	24	31	31	44	44	68	68	100	100
Power Amplifier	Dimensi	ons (mm) W × H × D	580 × 1950 × 850	580 × 1950 × 850	580 × 1950 × 850	1160 × 1950 × 850	580 × 1950 × 850	1160 × 1950 × 850	1160 × 1950 × 850	1160 1950 850				
	Mass (kg	g)	280	470	350	560	520	590	900	1000	1000	1150	1340	1850
Controller	troller Vibration Controller See Vibration Controller K				roller K2									
	Cooling	Method						Air cooling						
Cooling		Dimensions (mm) W × H × D*7	606 × 1315 × 891	708 × 1421 × 782	707 × 1531 × 917	707 × 1531 × 917	707 × 1531 × 917	707 × 1531 × 917	1057 × 1841 × 1125	1169 × 2123 × 799	1214 × 2006 × 1124	1128 × 2380 × 899	1462 × 2800 × 927	1462 2800 927
Cooling	Blower	Mass (kg)	125	140	210	210	210	210	250	280	420	228	536	536
		Wattage (kw)	3.7	3.7	5.5	5.5	5.5	5.5	11	11	18.5	18.5	30	30
		Duct Hose Diameter (φ)	125	125	200	200	200	200	250	250	250	250	250	250

\*2 Power supply: 3-phase 200/220/380/400/415 V (A74 is only AC380/400/415 V), 50/60 Hz. A transformer is required for other supply voltages.
\*3 Breaker capacity for AC200 V.
\*4 Breaker capacity for AC400 V.
\*5 Above 4000 Hz, the force rolls-off at a rate of -6 dB/oct.
\*6 Above 2000 Hz, the force rolls-off at a rate of -12 dB/oct.
\*7 Specification above applies to 60 Hz. Dimensions change for 50 Hz.
\*7 Specification above applies to 60 Hz. Dimensions change for 50 Hz.
\*8 An export license is required for exporting the shaker system of over 50 kN sine force. (see P. 76)
\*9 The alphabet of A, B, or C can be entered in ... A: Voltage AC200V system (200 to 230), B: Voltage AC400V system (380A to 440V), C: 480V system (480V to 520V)
\*The specification shows the maximum system performance. For long-duration tests, system must be de-rated up to 70%. Continuous use at maximum levels may cause failure.
Please contact IIW if your system operates at more than 70%.
\*For random vibration tests, please set the test definition of the peak value of acceleration waveform to operate at less than the maximum acceleration of shock.
\*Frequency range values vary according to the sensor and vibration controller.
\*Armature mass and acceleration may change when a chamber is added.
\*Mass and dimensions may change for CE-marked systems. \* Power supply: 3-phase 200/220/380/400/415 V (A74 is only AC380/400/415 V), 50/60 Hz. A transformer is required for other supply voltages.





Depth 20 M10 Depth 25 (P.C.D.100, 160, 250, 400) A65/A74

# **J**-series Large Displacement Range



### J-series accommodates high velocity and large displacement testing

Long duration shock tests require high velocity and large displacement. J-series is a high-functionality system that offers usability and durability furnished with functions that accommodate high velocity and large displacement testing.

[Expanded maximum test range] • Maximum velocity of Sine force: 2.4 m/s • Maximum velocity of Shock force: 4.6 m/s • Maximum displacement: 100 mmp-p [Patented upper (armature) support system PS Guide] Parallel Slope Guide is standard

[Low noise] Optimised design of the air intake based on fluid dynamics has reduced the air-intake noise.

[All models can be directly coupled to a climatic chamber]

	J230	J240
Table Insert Pattern (Unit: mm)		
	Diameter φ20	0 17-M10 Depth 40

(P.C.D.100, 160)

#### Specifications

System Model		J230/SA3HAG	J230S/SA7HAG	J240/SA4HAG				J260/SA7HAG*6	J260S/SA16HAG*6	
	Frequ	ency Range (Hz)	0-3000	0-3000	0-2400	0-2400	0-2200	0-2200	0-2600*4	0-2000
		Sine (kN)	16	16	24	24	35	40	54	54
	Rated Force	Random (kN rms)*1	16	16	24	24	35	40	54	54
	1 0100	Shock (kN)	40	40	55	70	70	80	108	196
		Sine (m/s <sup>2</sup> )	941	888	923	923	777	888	857	857
	Maximun Acc.	Random (m/s <sup>2</sup> rms)	658	622	646	646	544	622	600	600
System	Acc.	Shock (m/s <sup>2</sup> peak)	2000	2000	2000	2000	1555	1777	1714	2000
Specifications	Maximun	Sine (m/s)	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4
	Vel.	Shock (m/s peak)	2.4	3.5	2.4	3.6	2.4	2.4	2.4	4.6
	Maximum Disp	Sine (mmp-p)	100	100	100	100	100	100	100	100
	Maxin	num Travel (mmp-p)	120	120	120	120	120	120	116	116
	Maxin	num Load (kg)	300	300	400	400	600	600	1000	1000
	Power	Requirements (kVA)*2	28	38	38	52	53	57	86	96
	Break	er Capacity (A)*3	100	150	150	200	200	200	300	500
	Mode			J230S						J260S
	Armature Mass (kg)		17	18	26	26	45	45	63	63
	Armature Diameter (ømm)		200	200	290	290	440	440	446	432
Vibration	Allowat	le Eccentric Moment (N·m)	700	700	850	850	1550	1550	1550	1550
Generator	Dimer	nsions (mm) W×H×D	1124×1079×850	1124×1079×850	1234×1145×890	1234×1145×890	1463×1301×1100	1463×1301×1100	1527×1319×1100	1632×1388×1130
	Shake	r Body Diameter (φmm)	630	630	720	720	860	860	920	920
	Mass	(kg)	1800	1800	2400	2400	3500	3500	4100	5000
	Mode		1□GH3-J230	1□GH7-J230						1□GH16-J260S
Power	Maxin	num Output (kVA)	23	30	34	40	50	57	70	76
Amplifier	Dimer	nsions (mm) W×H×D	580×1750×850	580×1950×850	580×1750×850	1160×1950×850	580×1950×850	580×1950×850	580×1950×850	1740×1950×850
	Mass	(kg)	330	500	440	1200	880	910	1000	2400
Controller	Vibrat	ion Controller				See Vibration	Controller K2			
	Coolir	ng Method				Air co	ooling			
		Dimensions (mm) W×H×D*5	606×1315×891	606×1315×891	707×1531×917	707×1531×917	1057×1841×1125	1057×1841×1125	1328×2410×1097	1328×2410×1097
Cooling	Blower	Mass (kg)	125	125	210	210	250	250	370	370
	510110	Wattage (kw)	3.7	3.7	5.5	5.5	11	11	15	15
		Duct Hose Diameter (q)	200	200	200	200	250	250	250	250

Eco Specifications

System Model			💋 J230/EM3HAG	J240/EM4HAG	💋 J250/EM5HAG	💋 J250/EM6HAG	J260/EM7HAG*
	Frequency Range (Hz)		0-3000	0-2400	0-2200	0-2200	0-2600*4
		Sine (kN)	16	24	35	40	54
	Rated	Random (kN rms)*1	16	24	35	40	54
	Force	Shock (kN)	40	55	70	80	108
		High Velocity Shock (kN)*7	30	48	68	77	96
		Sine (m/s <sup>2</sup> )	941	923	777	888	857
	Maximum	Random (m/s <sup>2</sup> rms)	658	646	544	622	600
System	Acc.	Shock (m/s <sup>2</sup> peak)	2000	2000	1555	1777	1714
ecifications	5	High Velocity Shock (m/s <sup>2</sup> peak)*7	1764	1846	1511	1711	1523
		Sine (m/s)	2.4	2.4	2.4	2.4	2.4
	Maximum Vel.	Shock (m/s peak)	2.4	2.4	2.4	2.4	2.4
	vei.	High Velocity Shock (m/s peak)*7	3.5	3.5	3.5	3.5	3.5
	Maximum	Sine (mmp-p)	100	100	100	100	100
	Disp.	High Velocity Shock (mmp-p)*7	100	100	100	100	100
	Maximum Travel (mmp-p)		120	120	120	120	116
	Maximum Load (kg)		300	400	600	600	1000
	Power Requirements (kVA)*2		28	38	53	57	86
	Breaker Capacity (A)*3		100	150	200	200	300
			J230				
	Armat	ure Mass (kg)	17	26	45	45	63
<i>c</i> 1 <i>c</i> <sup>2</sup>	Armat	ure Diameter (φmm)	200	290	440	440	446
/ibration Generator	Allowab	le Eccentric Moment (N·m)	700	850	1550	1550	1550
chiciator	Dimer	isions (mm) W×H×D	1124×1079×850	1234×1145×890	1463×1301×1100	1463×1301×1100	1527×1319×1100
	Shaker	Body Diameter (φmm)	630	720	860	860	920
	Mass	(kg)	1800	2400	3500	3500	4100
			2□GH3-J230				
Power	Maxim	num Output (kVA)	23	34	50	57	70
Amplifier	Dimer	isions (mm) W×H×D	580×1750×850	580×1750×850	580×2100×850	580×2100×850	1160×1950×850
	Mass	(kg)	380	490	930	960	1400
ontroller	Vibrat	ion Controller			See Vibration Controller K2		
		ig Method			Air cooling		
	[	Dimensions (mm) W×H×D*5	708×1421×782	707×1531×917	1169×2123×799	1169×2123×799	1328×2410×1097
Cooling	Blower	Mass (kg)	140	210	280	280	370
	Diower	Nattage (kw)	3.7	5.5	11	11	15
	Duct Hose Diameter (φ)		200	200	250	250	250

\*1 Random force ratings are specified in accordance with ISO5344 conditions. Please contact IMV or your local distributor with specific test requirements. \*2 Power supply: 3-phase 200/220/240/380/400/415 V, 50/60 Hz. A transformer is required for other supply voltages. \*3 Breaker capacity for 200 V. \*4 Above 2000 Hz, the force rolls-off at a rate of -12 dB/oct. \*5 Specification above applies to 60 Hz. Dimensions change for 50 Hz. 



(P.C.D.100, 160, 250)



25-M10 Depth 40 (P.C.D.100, 160, 250, 400)

J260/J260S



Diameter @446 (J260) neter @432 (J260S 25-M10 Depth 40

(P.C.D.100, 160, 250, 400)

# **I-Series** Standard Range




### Universally applicable with over 15 years of sales success.

The i-series is a standard range and easier to maintain than custom products.

#### [Maximum test range]

• Maximum acceleration: 1250 m/s<sup>2</sup> •Maximum velocity: 3.5 m/s •Maximum displacement: 51 mmp-p •Maximum loading mass: 200 kg [Patented upper (armature) support system PS Guide] Parallel Slope Guide is standard [All models can be directly paired with a climatic chamber.] Table Insert Pattern (Unit: mm)



#### Specifications

			i210/SA1HAG	i220/SA1HAG
	Frequency Ran	ge (Hz)	0-4000	0-3300
		Sine (kN)	3	8
	Rated Force	Random (kN rms)*1	3	8
		Shock (kN)	9	16
		Sine (m/s <sup>2</sup> )	1000	1250
	Maximum Acc.	Random (m/s <sup>2</sup> rms)	700	875
System		Shock (m/s² peak)	2000	2000
cifications	Maximum Vel.	Sine (m/s)	2.2	2.2
	waximum vei.	Shock (m/s peak)	2.2	2.2
	Maximum Disp. Sine (mmp-p)		30	51
	Maximum Trave	el (mmp-p)	40	60
	Maximum Load	(kg)	120	200
	Power Requirer	nents (kVA)*2	6.8	16.4
	Breaker Capaci	ty (A)*3	30	60
	Model			i220
	Armature Mass (kg)		3	6.4
bration	Armature Diam	eter (qmm)	128	190
nerator	Allowable Ecce	entric Moment (N·m)	160	294
	Dimensions (m	m) W × H × D	868×700×458	1020×903×550
	Shaker Body Di	ameter (φmm)	458	550
	Mass (kg)		350	900
	Model*6			1□GH1-i220
Power	Maximum Outp	out (kVA)	5	10
mplifier	Dimensions (m	m) W×H×D	580 × 1750 × 850	580×1750×850
	Mass (kg)		240	280
ontroller	Vibration Contr	oller	See Vibration (	Controller K2
	Cooling Metho	d	Air co	bling
		Dimensions (mm) W×H×D*4	386×882×369	492×1128×625
Cooling	Blower	Mass (kg)	22	70
	Diotroi	Wattage (kw)	0.4	1.5
		Duct Hose Diameter (φ)	125	125

#### Eco Specifications

op	Comoutone							
	System Mo		💋 i220/EM1HAG					
	Frequency Rar	nge (Hz)	0-3300					
		Sine (kN)	8					
	Rated Force	Random (kN rms)*1	8					
		Shock (kN)	16					
		High Velocity Shock (kN)*5	10					
		Sine (m/s <sup>2</sup> )	1250					
	Maximum Acc.	Random (m/s <sup>2</sup> rms)	875					
System	Waximum Acc.	Shock (m/s <sup>2</sup> peak)	2000					
Specifications		High Velocity Shock (m/s <sup>2</sup> peak)*5	1562					
		Sine (m/s)	2.2					
	Maximum Vel.	Shock (m/s peak)	2.2					
		High Velocity Shock (m/s peak)*5	3.5					
	Maximum Disp.	Sine (mmp-p)	51					
	Maximum Disp.	High Velocity Shock (mmp-p)*5	51					
	Maximum Trav	el (mmp-p)	60					
	Maximum Load	1 (kg)	200					
	Power Require	ments (kVA)*2	16.4					
	Breaker Capac	tity (A)*3	60					
	Model*6		i220					
	Armature Mass	s (kg)	6.4					
Vibration	Armature Diam	eter (φmm)	190					
Generator	Allowable Ecce	ntric Moment (N·m)	294					
	Dimensions (m	m) W×H×D	1020×903×550					
	Shaker Body Di	ameter (φmm)	550					
	Mass (kg)		900					
			2□GH1-i220					
Power	Maximum Outp	out (kVA)	10					
Amplifier	Dimensions (m	m) W×H×D	580×1750×850					
	Mass (kg)		330					
Controller	Vibration Contr	oller	See Vibration Controller K2					
	Cooling Methor	d	Air cooling					
		Dimensions (mm) W×H×D*4	492×1128×625					
Cooling	DI	Mass (kg)	70					
	Blower	Wattage (kw)	1.5					
		Duct Hose Diameter (φ)	125					

\*1 Ranfom force ratings are specified in accordance with ISO5344 conditions. Please contact IMV or your local distributor with specific test requirements. \*2 Power supply: 3-phase 200/220/380/400/415 V, 50/60 Hz. A transformer is required for other supply voltages. \*3 Breaker capacity for 200 V. \*4 Specification above applies to 60 Hz. Dimensions change for 50 Hz. \*5 For high velocity option \*6 The alphabet of A, B, or C can be entered in ... A: Voltage AC200V system (200 to 230), B: Voltage AC400V system (380A to 440V), C: 480V system (480V to 520V) \*The specification shows the maximum system performance. For long-duration tests, system must be de-rated up to 70%. Continuous use at maximum levels may cause failure. Please contact IMV if your system operates at more than 70%. \*For random vibration tests, please set the test definition of the peak value of acceleration waveform to operate at less than the maximum acceleration of shock. \*Frequency range values vary according to the sensor and vibration controller. \*Armature mass and acceleration may change of CE-marked systems.

# **C-series** Transportation Test Range



### Large displacement is ideal for heavy weight transportation testing.

C-series is optimized for transportation tests.

[Heavy weight load] The improved load capacity realizes vibration testing with heavy weight specimen. [Large maximum displacement] C-series is suitable for low-frequency, high-displacement tests commonly used in transport vibration testing.

#### Standard 76.2 mmp-p displacement C-series has a displacement of 76.2 mmp-p (3 inch stroke).



#### High rigidity

C-series vibration generators are designed to support specimens whose center of gravities are high or deviated from the center lines. \* Please refer to page 73 for allowable eccentric moment.





C10

Rated force: 10 kN Allowable eccentric moment: 686 N•m

Specifications


Table Insert Pattern (Unit: mm)

Diameter @300

/17-φ11 Depth 20 M10 Depth 25

(P.C.D.160, 250)

C10

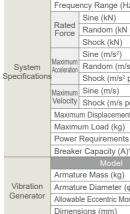

Mass (kg)

#### Maximum load 1,000 kg

C-series vibration generators are enhanced for the maximum allowable payload surpassing the conventional. It enables them to perform vibration testing for heavier specimens.



C10 1,000 kg

A74 1,000 kg



CV-series (Conventional) 300 kg



Rated force: 11 kN Allowable eccentric moment: 294 N•m

	C10/SA1HAG				1□GH1-C10	
łz)	0-2000	Power	Maxi	mum Output (kVA)	6.2	
	10	Amplifier	Dime	ensions (mm)	580×1950×850	
l rms)	7		Mass	s (kg)	260	
	20	Controller		See Vibration Control	ler K2	
	400		Cooli	ing Method	Air cooling	
's² rms)	280			Dimensions W×H×D (mm)*3	479×1075×667	
peak)	800	Cooling	Blower	Mass (kg)	56	
	1.2		Diowor	Wattage (kw)	2.2	
peak)	2.0			Duct Hose Diameter (φ)	200	
nt (mmp-p)	76.2	*1 Power supp	ly requ	ired is 3-phase 200/220/380/40	0/415 V, 50/60 Hz	
	1000	0		ner (Step-down transformer) is req	uired for other voltage	
s (kVA)*1	11.9	*2 Breaker capa		r 200 V applies to 60 Hz. Dimensions ch		
)*2	50			B. or C can be entered in a. A:	0	
	C10			B: Voltage AC400V system (380	A to 440V),	
	25	C: 480V system *The specificati	·	/ to 520V) ws the maximum system perform	ance	
φmm)	300			, system must be de-rated up to 7		
oment (N·m)	686			ay cause failure. Please contact	IMV if your system	
	1100×1142×840	operates at mo		70%. es vary according to the sensor ar	ad vibration controlle	
	2000		-	chamber is added.		

# **K-series** High Excitation Force Water Cooled Range



# High excitation force and silent water cooled system for improving test environment

K-series, high excitation force water cooled vibration simulating test systems fully developed by IMV. Advanced function of the K-series will significantly improve the test environment.

[Silent system design] The water cooling system produces neither the intake nor exhaust sounds that an air cooling system emits. [Record of significant accomplishments] IMV has been developing the most advanced water cooled system.

Table Insert Patt	ern (Unit: mm)		
			_
Diameter ¢320	Diameter ¢400	Diameter ¢446	
(P.C.D.160, 250)	(P.C.D.100, 200, 315)	25-φ11 Depth 20 M10 Depth 25 (P.C.D.100, 160, 250, 400)	
K030	K060	K080	


#### Specifications

	System	Model	K030/SA4HAG	K062/SA8HAG*6	K080/SA10HAG*6	K100A/SA14HAG*6	K125A/SA18HAG*6	K100LS/SA16HAG*6	K125LS/SA20HAG*6	K160/SA20HAG*6	K200/SA24HAG*6	K350/SA36HAG*6
	Frequen	cy Range (Hz)	0-3000	0-2500	0-2500	0-2500	0-2500	0-2000	0-2000	0-2000	0-2000	0-2000
		Sine (kN)	30.8	61.7	80	100	125	100	125	160	200	350
	Rated Force	Random (kN rms)*1	21.5	61.7	80	100	125	100	125	160	200	315
	10100	Shock (kN)	61.6	123.4	160	200	250	200	250	320	400	700
		Sine (m/s <sup>2</sup> )	1000	1000	1000	1000	1000	1000	1000	800	1000	1000
	Maximum Acc.	Random (m/s <sup>2</sup> rms)	557	700	700	700	700	700	700	560	700	700
System Specifications	7100.	Shock (m/s <sup>2</sup> peak)	2000	2000	2000	2000	2000	2000	2000	1600	2000	2000
Specifications	Maximum	Sine (m/s)*3	1.8	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
	Vel.	Shock (m/s peak)	1.8	2.0	2.0	2.0	2.0	2.0	2.0	2.4	2.4	3.5
	Maximum Disp.	Sine (mmp-p)	51	51	51	51	51	100	100	76.2	76.2	76.2
	Maximur	m Travel (mmp-p)	58	60	59	62	62	116	116	86	86	94
	Maximur	m Load (kg)	500	1000	1000	2000	2000	2000	2000	2000	2000	3000
	Power R	equirements (kVA)*2	49	87	100	150	170	170	190	270	300	325
	Breaker	Capacity (A)*4	175	350	350	600	600	600	700	-	-	-
						K125A	K125A	K125LS	K125LS	K200	K200	K350
	Armatur	e Mass (kg)	27	40	60	80	80	100	100	200	200	350
Vibration	Armatur	e Diameter (φmm)	320	400	446	560	560	560	560	650	650	760
Generator	Allowable	Eccentric Moment (N+m)	980	980	1550	2450	2450	2450	2450	4900	4900	4900
	Dimensi	ons (mm) W×H×D	1100×1090×824	1380×1085×1000	1595×1200×1050	1776×1373×1300	1776×1373×1300	1990×546×1370	1990×1546×1370	2465×1908×1740	2465×1908×1740	3020×2306×2080
	Shaker B	ody Diameter (φmm)	760	900	1000	1100	1100	1100	1100	1260	1260	1630
	Mass (k	g)	3000	3700	5000	7000	7000	8000	8000	19000	19000	40000
	Model*7		1□GH4-K030	1□GH8-K060	1□GH10-K080	1□GH14-K125A	1□GH18-K125A	1□GH16-K125LS	1□GH20-K125LS	1□GJ20-K200	1□GJ24-K200	1□GH36-K350
Power	Maximur	n Output (kVA)	33	60	100	98	124	124	155	256	320	400
Amplifier	Dimensi	ons (mm) W×H×D	580×1950×850	1160×1950×850	1160×1950×850	1740×1950×850	1740×1950×850	1740×1950×850	1740×1950×850	2320×1950×850	2900×1950×850	4060×1950×850
	Mass (k	g)	950	1350	1500	2500	2600	2600	3300	4850	5000	5450
Controller	Vibratio	n Controller					See Vibratio	n Controller K	2			
	Cooling	Method				Shaker: W	/ater cooling/P	ower Amplifie	r: Air Cooling			
Cooling	Primary C	Cooling Water (ℓ/min)	195	260	390	390	390	390	390	650* <sup>5</sup>	650* <sup>5</sup>	650*5
5	Heat	Dimensions (mm) W×H×D										
	Exchanger	Mass (kg)	400	400	400	400	400	400	400	600	600	950

#### Eco Specifications

	System	Model	K030/ EM4HAG	K062 /EM8HAG*6	K080/ EM10HAG*6	K100A/ EM14HAG*6	K125A/ EM18HAG*6	K100LS/ EM16HAG*6	K125LS/ EM20HAG*6	K160/ EM20HAG*6	K200/ EM24HAG*6	K350/ EM36HAG*6
	Frequen	cy Range (Hz)	0-3000	0-2500	0-2500	0-2500	0-2500	0-2000	0-2000	0-2000	0-2000	0-2000
		Sine (kN)	30.8	61.7	80	100	125	100	125	160	200	350
	Rated Force	Random (kN rms)*1	21.5	61.7	80	100	125	100	125	160	200	315
		Shock (kN)	61.6	123.4	160	200	250	200	250	320	400	700
		Sine (m/s <sup>2</sup> )	1000	1000	1000	1000	1000	1000	1000	800	1000	1000
<b>.</b> .	Maximum Acc.	Random (m/s <sup>2</sup> rms)	557	700	700	700	700	700	700	560	700	700
System Specifications		Shock (m/s <sup>2</sup> peak)	2000	2000	2000	2000	2000	2000	2000	1600	2000	2000
Opecifications	Maximum	Sine (m/s)*3	1.8	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
	Vel.	Shock (m/s peak)	1.8	2.0	2.0	2.0	2.0	2.0	2.0	2.4	2.4	3.5
	Maximum Disp.	Sine (mmp-p)	51	51	51	51	51	100	100	76.2	76.2	76.2
	Maximur	n Travel (mmp-p)	58	60	59	62	62	116	116	86	86	94
	Maximur	n Load (kg)	500	1000	1000	2000	2000	2000	2000	2000	2000	3000
	Power R	equirements (kVA)*2	49	87	100	150	170	170	190	270	300	325
	Breaker	Capacity (A)*4	175	350	350	600	600	600	700	-	-	-
	Model					K125A	K125A	K125LS	K125LS	K200	K200	K350
	Armatur	e Mass (kg)	27	40	60	80	80	100	100	200	200	350
	Armatur	e Diameter (φmm)	320	400	446	560	560	560	560	650	650	760
Vibration Generator	Allowable	Eccentric Moment (N·m)	980	980	1550	2450	2450	2450	2450	4900	4900	4900
Contorator	Dimensi	ons (mm) W×H×D	1100×1090×824	1380×1085×1000	1595×1200×1050	1776×1373×1300	1776×1373×1300	1990×1546×1370	1990×1546×1370	2465×1908×1740	2465×1908×1740	3020×2306×2080
	Shaker B	ody Diameter (φmm)	760	900	1000	1100	1100	1100	1100	1260	1260	1630
	Mass (k	g)	3000	3700	5000	7000	7000	8000	8000	19000	19000	40000
	Model*7		2□GH4-K030	2□GH8-K060	2□GH10-K080	2□GH14-K125A		2□GH16-K125LS	2 GH20-K125LS	2_GJ20-K200	2_GJ24-K200	2□GH36-K350
Power	Maximur	m Output (kVA)	33	60	100	98	124	124	155	256	320	400
Amplifier	Dimensi	ons (mm) W×H×D	1160×1950×850	1160×1950×850	1160×1950×850	1740×1950×850	1740×1950×850	1740×1950×850	1740×1950×850	2320×1950×850	2900×1950×850	4060×1950×850
	Mass (k	g)	950	1350	1500	2500	2600	2650	3350	4850	5000	5450
Controller	Vibratio	n Controller					See Vibration	Controller K2				
	Cooling	Method				Shaker: Wa	ater cooling/Po	wer Amplifier:	Air Cooling			
Cooling	Primary C	Cooling Water (ℓ/min)	195	260	390	390*5	390*5	390*5	390*5	650*5	650*5	590* <sup>5</sup>
Cooling	Heat	Dimensions (mm) W×H×D	580×1700×850	580×1700×850	580×1700×850	580 × 1700 × 850	580×1700×850	580×1700×850	580×1700×850	1050×1900×800	1050×1900×800	1200×1950×1400
	Exchanger	Mass (kg)	400	400	400	400	400	400	400	600	600	950

\*1 Random force ratings are specified in accordance with ISO5344 conditions. Please contact IMV or your local distributor with specific test requirements. \*2 Power supply: 3-phase 200/220/240/380/400/415 V (K200 and K350 is AC380/400/415V), 50/60 Hz. A transformer is required for other supply voltages. \*3 If the tests (Sweep or Spot) include high velocity, the maximum velocity value should be reduced to 1.4 m/s. \*4 Breaker capacity for 200 V \*5 Bypass circuit is needed. Please contact IMV or your local distributor for further information. \*6 An export license is required for exporting the shaker system of over 50 kN sine force. (See P. 76) \*7 The alphabet of A, B, or C can be entered in ... A: Voltage AC200V system (200 to 230), B: Voltage AC400V system (380A to 440V), C: 480V system (480V to 520V) \*The specification shows the maximum system performance. For long-duration tests, system must be de-rated up to 70%. Continuous use at maximum levels may cause failure. Please contact IMV if your system operates at more than 70%. \*For random vibration tests, please set the test definition of the peak value of acceleration waveform to operate at less than the maximum acceleration of shock. \*Frequency range values vary according to the shaker.







/33-φ17 Depth 20 M16 Depth 30 P.C.D. 203.2, 406.4, 558.8, 711.2) K350

# **M**-series Low Acoustic Noise and Compact Range





m030/MA1

#### Accessories

A pair of carrying handles Safely and easily carried by one or two operators. \*Removable m030 and m060 only



The vibration table height is adjusted to compensate for payload weight using an air pump.

### Silent model suitable for abnormal noise inspection

Compact and silent design, but also powerful enough for full-scale tests.

[Silent design employing a built-in cooling fan] DC-powered cooling fan is built into the shaker. Natural air-cooling is also used when the cooling fan is stopped for silent operation (with a reduction in performance).

#### Specifications

	System M	/lodel	m030/MA1-CE	m060/MA1-CE	m120/MA1-CE	m030H/MA1	m130LS/MA1-CE
	Frequen	cy Range (Hz)	0-3000	0-3000	0-2000	1000-10000	2 - 1000
		Sine (N)	300	600	1200	380	1300
	Rated Force	Random (N rms)	210	420	840	266	650
		Shock (N)	300	600	1200	380	1300
		No Load (m/s <sup>2</sup> )	500	500	500	200	130
System Specifications	Maximum Acc.	0.5kg Load (m/s <sup>2</sup> )	272	352	413	158	123
poomoutono		1.0kg Load (m/s <sup>2</sup> )	187	272	352	131	118
	Maximun	n Velocity (m/s)	1.6	1.6	1.6	*1	1.0
	Maximum	Displacement (mmp-p)	26	30	30	*1	51
	Maximun	n Load (kg)	15	15	120	15	100
	Power Re	equirements (kVA)*2	0.4	0.7	1.1	0.5	1.0
	Model		m030-CE	m060-CE	m120-CE	m030H	m130LS-CE
	Armature	e Support Method	Diaphragm spring	Diaphragm spring	Air suspension	Rubber spring	Air Suspension
Vibration	Armature	e Mass (kg)	0.6	1.2	2.4	1.9	10
Generator	Armature	e Diameter (φmm)	114	114	174	65	180
	Dimensio	ons (mm)	φ190×H240	φ230×H281	φ320×H327*3	φ190×H275	W410 × H592 × D460
	Mass (kg	1)	22	40	110	30	250
	Model		MA1-CE	MA1-CE	MA1-CE	MA1-CE	MA1-CE
	Maximun	n Output (kVA)	1	1	1	1	1
Power Amplifier	Dimensio	ons (mm) W×H×D	430×149×430	430×149×430	430×149×430	430×149×430	430×149×430
	Mass (kg	1)	25	25	25	25	25
	Cooling	Method			Air cooling		
Cooling	Blower			ŀ	Housed in vibration generato	r	

\*1 The displacement at the lower limit of frequency (1000 Hz) and maximum acceleration (200 m/s<sup>2</sup>) is so small that there is no certified value \*2 Power supply: single-phase AC100 V/200 V or AC110 V/220 V or AC120 V/240 V ±10% 50/60 Hz. A transformer is required for other supply voltages

\*3 Insulation pad (W410 x H45 x D410 mm) is standard equipme

\*The specification shows the maximum system performance. For long-duration tests, system must be de-rated up to 70%. Continuous use at maximum levels may cause failure. Please contact IMV if your system operates at more than 70%. \*Frequency range values vary according to the sensor and vibration controller.


21



Acoustic noise testing is made possible by placing the shaker in a soundproof box.

#### Excitation at any selected point



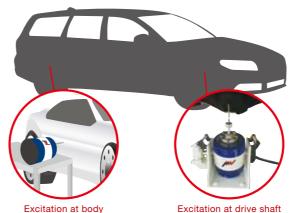

Modal analysis can be done by applying vibration to the car body, etc.

#### TBV-125- - A 125×125×t 20 0.9 2000 TBV-200-□-A 200×200×t 20 2.5 1500 TBV-315- - A 315×315×t 30 8.5 1000 \*TBV-400- -A 400×400×t 35 14.4 600

9-M6 Depth 10

(P.C.D.100)

m060

"-A" at the end of model number shows that material is aluminum alloy Add the vibration generator type where "
]" is shown

\*A supplementary guidance system using linear bearings is used with the generator when combined with the head expander. Armature mass is increased due to the addition of the guide support.



guidance system (GDP)

Soundproof enclosure

Table Insert Pattern (Unit: mm)

9-M6 Depth 10

(P.C.D.100)

m030

Option

Head expander







#### Slip table

Model	Dimensions	Maximum frequency	Mass (kg)				
WOUEI				m060	m120	m130LS	
TBH-200	200×200	500	4	4	5.5	-	
TBH-315	315×315	500	7.5	7.5	9	-	
TBH-400	400×400	500	-	12.3	14	-	
TBH-500	500×500	500	-	-	-	28	

\*The material of slip plate is aluminum alloy



Head expander



Slip table

#### Emergency stop switch



It is possible to stop the system in an emergency.

#### Moving device



Eliminates the hassle of moving the machine and enables tests to be performed in any available space.

# **VSH/PET** High Frequency and Compact Range

### Suitable for bench-top simulation

Ideal for bench-top testing

#### [Compact] Portable

[Compatible vibration controllers] Versatile vibration controller provides wide range of test types.






Table Insert Pattern (Unit:mm)

VEH-100, VEH-100R

0-10000

980

392 980

980

0.8

10

Up to the spring constant

Flexures / Rollers

49

1.0

96

φ390×H306

120

1.5

580×1750×850

230

Air coolin

247×252×284

10.5



Option

Adapter for PET



\* Frequency range values vary according to the sensor and vibration controller

By attaching the adapter to PET series, it is possible to increase the moment restraint force and it can be used as a vibration source for modal analysis. It also possible to apply vibration to products intricately shaped by combining multiple units.

#### Specifications

	System Model	PET-01/PA	PET-05/PA	PET-05H/PA	
	Frequency Range (Hz)	2-12000	2-14000	5-40000	
	Rated Sine (N)	9.8	49	49	
	Force Random (N rms)	—	—	—	
System	Shock (N)	—	—	—	
Specifications	Maximum Acceleration (m/s <sup>2</sup> )*1	326	326	376	
	Maximum Velocity (m/s)	—	_	—	
	Maximum Displacement (mmp-p)	5	5	5	
	Maximum Load (kg)	Up to the spring constant	Up to the spring constant	Up to the spring constant	
	Power Requirements (kVA)*2	0.08	0.1	0.1	
	Model	PET-01	PET-05	PET-05H	
	Armature Support Method	Diaphragm spring	Diaphragm spring	Diaphragm spring	
Vibration	Armature Support Spring Constant (kN/m)	9.8	15.6	15.6	
Generator	Armature Mass (kg)	0.03	0.15	0.13	
donorator	Armature Diameter (qmm)	12	30	30	
	Dimensions (mm) W×H×D	75×72×75	116×115×116	116×115×116	
	Mass (kg)	1.3	5.0	5.0	
	Model	PA01	PA05	PA05H	
Power	Maximum Output (kVA)	0.03	0.045	0.045	
Amplifier	Dimensions (mm) W×H×D	279 × 140 × 280	279 × 140 × 280	279 × 140 × 280	
	Mass (kg)	9	9	9	
Cooling	Cooling Method	Natural radiation	Natural radiation	Natural radiation	

\*1) Spec described above is under bare table condition. The maximum acceleration decreases when accelerometer and mounting adapter are mounted. \*2) Power supply : single phase AC100 V ±10 %, 50/60 Hz (Voltage down transformer [step-down transformer] is required for other voltage)

\*1 Spec described above is under bare table condition. The maximum acceleration decreases when accelerometer and mounting adapter are mounted.

\*2 Power supply : three-phase AC200 V±10 %, 50 / 60 Hz (Voltage down transformer [step-down transformer] is required for other voltage)

\* The specification shows the maximum system performance. For long-duration tests, de-rating by up to 70 % must be applied. Continuous use at maximum levels may cause failure. Please contact IMV if you use more than 70 %. \* Frequency range values vary according to sensor and vibration controlle

0-8000

980

392

980

0.8

10

30

4.0

Roller / Air suspensior

1.0

96

φ390×H306

120

VAH-M2

1.5

580×1750×850

230

Air coolin

247×252×284

10.5

[Basic Systems] Vibration Test Systems

Specifications

System

Vibration

Generator

Power

Amplifier

Cooling

Frequency Range (Hz)

Sine (N)

Rated Force Random (N rms) Shock (N)

Maximum Velocity (m/s)

Maximum Load (kg) Power Requirements (kVA)\*2

Model Armature Support Method

Armature Diameter (omm

Dimensions (mm) W×H×D

Maximum Output (kVA)

Dimensions (mm) W×H×D

Blower Dimensions W×H×D (mm) Mass (kg)

Maximum Displacement (mmp-p)

Armature Support Spring Constant (kN/m)

cifications Maximum Acceleration (m/s<sup>2</sup>)\*

Armature Mass (kg)


Mass (kg)


Mass (kg)

Cooling Method

23

#### Table Insert Pattern (Unit:mm)

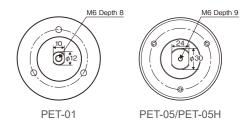

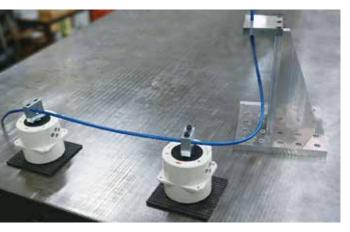

The specification shows the maximum system performance. For long-duration tests, system must be de-rated up to 70%. Continuous use at maximum levels may cause failure. Please contact IMV if your system operates at more than 70%.


#### Head expander (flat surface type)

# **Optional Units**

Head expanders and cubic fixtures


#### Head expanders

Where the size of the specimen exceeds the dimensions of the armature a head expander should be used. Generally, the maximum usable frequency is reduced as the size of specimen increases. The head expander should be selected based on specimen size and maximum test frequency required. Properties of the standard range of head expanders is shown in the table.

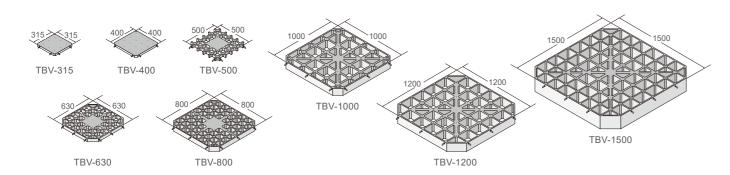



Model	Dimensions	Mass	Maximum					A-series	S					i-serie	s
woder		(kg)	Frequency (Hz)										i210		i220
TBV-125-🗌-A	125×125	0.9	2000	-		_	-		-	-		-	0		-
TBV-125M	t 20	0.6	2000	-		-	-		-	-		-	0		-
TBV-315-🗌-A	315×315	8.5	1000	0		0	0		-	_		-	0		0
TBV-315M	t 30	5.8	1000	0		0	0		-	_		_	0		0
TBV-400-🗌-A	400×400	13	600	0		0	0		-	-		-	0		0
TBV-400M	t 30	9	000	0		0	0		-	-		-	0		0
TBV-500-🗌-A	500×500	15	500	0		0	0		0	0		0	0		0
TBV-500-🗌-M	t 40	10.4	500	0		0	0		0	0		0	0		0
TBV-630-🗌-A	630×630	19	360	0		0	0		0	0		0	0		0
TBV-630M	t 45	12.5	300	0		0	0		0	0		0	0		0
TBV-800-🗌-A	800×800	45	350	0		0	0		0	0		0	-		0
TBV-800M	t 70	30	350	0		0	0		0	0		0	-		0
TBV-1000-□-A	1000×1000	110	350	0		0	0		0	0		0	-		-
TBV-1000M	t 110	78	350	0		0	0		0	0		0	-		-
TBV-1200-□-A	1200×1200 t 125	180	200	-		0	0		0	0		0	-		-
TBV-1500-□-A	1500×1500 t 200	300	200	_		_			0	0		0	-		-
	Dimensions Mass														
Model	Dimensions	Mass	Maximum Frequency		J-	series		C-series	s			K-series			
Model	Dimensions (mm)	Mass (kg)	Maximum Frequency (Hz)	J230	J- J240	series J250	J260	C-series C10	s K030	K060	K080	K-series K125	K125LS	K200	K350
Model TBV-125-□-A	(mm) 125×125		Frequency (Hz)	J230			J260			K060 —	K080		K125LS	K200	K350
	(mm)	(kg)	Frequency		J240	J250		C10	K030			K125			
TBV-125A	(mm) 125×125 t 20 315×315	(kg) 0.9	Frequency- (Hz)	-	J240	J250	-	C10	K030	-	-	K125	-	-	-
TBV-125A TBV-125M	(mm) 125×125 t 20	(kg) 0.9 0.6	Frequency (Hz)	-	J240 — —	J250 — —	-	C10 _ _	K030 — —	-	-	K125 — —	-	-	-
TBV-125 A TBV-125 M TBV-315 A	(mm) 125×125 t 20 315×315 t 30 400×400	(kg) 0.9 0.6 8.5	Frequency- (Hz) 2000 - 1000 -	_ _ O	J240 — — —	J250 — — —	_ _ _	C10 - - O	K030 — — —	- - -	-	K125 — — —		-	
TBV-125-□-A TBV-125-□-M TBV-315-□-A TBV-315-□-M	(mm) 125×125 t 20 315×315 t 30	(kg) 0.9 0.6 8.5 5.8	Frequency- (Hz)	- - 0	J240 — — — — —	J250 — — — — —		C10 - - 0 0	K030 — — — — —	- - - -	- - -	K125 - - - -	- - -	 	
TBV-125-□-A TBV-125-□-M TBV-315-□-A TBV-315-□-M TBV-400-□-A	(mm) 125 × 125 t 20 315 × 315 t 30 400 × 400 t 30 500 × 500	(kg) 0.9 0.6 8.5 5.8 13	Frequency- (Hz) 2000 - 1000 - 600 -	- - 0 0	J240  0 0 0	J250 — — — — — — — — —		C10  0 0 0	K030     O			K125 - - - - - -		  	
TBV-125A TBV-125M TBV-315A TBV-315M TBV-400A TBV-400M	(mm) 125×125 t 20 315×315 t 30 400×400 t 30	(kg) 0.9 0.6 8.5 5.8 13 9	Frequency- (Hz) 2000 - 1000 -	- 0 0 0	J240 - 0 0 0 0 0	J250 — — — — — — — — — — —		C10  0 0 0 0 0	K030 			K125 - - - - - - - - - -		- - - - -	
TBV-125A TBV-125M TBV-315A TBV-315M TBV-400A TBV-400M TBV-500A	(mm) 125×125 t 20 315×315 t 30 400×400 t 30 500×500 t 40 630×630	(kg) 0.9 0.6 8.5 5.8 13 9 15	Frequency- (Hz) 2000 - 1000 - 600 - 500 -	- 0 0 0 0	J240  0 0 0 0 0 0	J250 - - - - - - - - - - - - -	- - - - - - 0	C10  0 0 0 0 0 0 0	K030    0 0 0 0	- - - - - - 0	- - - - - - 0	K125 - - - - - - - - - - - - -	- - - - -	    	
TBV-125-[]-A           TBV-125-[]-M           TBV-315-[]-A           TBV-315-[]-M           TBV-400-[]-A           TBV-400-[]-A           TBV-500-[]-A           TBV-500-[]-M	(mm) 125×125 t 20 - 315×315 t 30 - 400×400 t 30 - 500×500 t 40	(kg) 0.9 0.6 8.5 5.8 13 9 15 10.4	Frequency- (Hz) 2000 - 1000 - 600 -	- 0 0 0 0 0	J240  0 0 0 0 0 0	J250        0 0 0	- - - - - 0	C10 - 0 0 0 0 0 0 0 0	K030 	- - - - - - 0	     0 0	K125 			
TBV-125-[]-A           TBV-125-[]-M           TBV-315-[]-A           TBV-315-[]-M           TBV-400-[]-A           TBV-400-[]-A           TBV-500-[]-A           TBV-500-[]-A           TBV-500-[]-A	(mm) 125×125 t 20 315×315 t 30 400×400 t 30 500×500 t 40 630×630	(kg) 0.9 0.6 8.5 5.8 13 9 15 10.4 19	Frequency- (Hz) 2000 - 1000 - 600 - 500 - 360 -	- 0 0 0 0 0 0 0	J240  0 0 0 0 0 0 0 0 0 0 0 0 0	J250 	- - - - - 0 0 0	C10 - - 0 0 0 0 0 0 0 0 0 0 0 0 0	K030 	- - - - - 0 0	- - - - - 0 0 0	K125          -	- - - - - - - - - - - 0		
TBV-125-[]-A           TBV-315-[]-A           TBV-315-[]-A           TBV-400-[]-A           TBV-400-[]-A           TBV-500-[]-A           TBV-500-[]-A           TBV-500-[]-A           TBV-500-[]-A           TBV-630-[]-A	(mm) 125×125 t 20 315×315 t 30 400×400 t 30 500×500 t 40 630×630 t 45	(kg) 0.9 0.6 8.5 5.8 13 9 15 10.4 19 12.5	Frequency- (Hz) 2000 1000 600 500	- 0 0 0 0 0 0 0 0	J240 	J250      0 0 0 0 0 0 0 0 0 0 0 0 0	- - - - - 0 0 0 0 0	C10 - 0 0 0 0 0 0 0 0 0 0 0 0 0	K030    0 0 0 0 0 0 0 0 0 0 0 0 0	- - - - - - 0 0 0 0 0	- - - - 0 0 0 0	K125        0 0 0	- - - - - - 0 0		- - - - - - - - - - - - - - - - - - -
TBV-125A TBV-125M TBV-315M TBV-315M TBV-400A TBV-500M TBV-500M TBV-500	(mm) 125×125 t 20 315×315 t 30 400×400 t 30 500×500 t 40 630×630 t 45 800×800	(kg) 0.9 0.6 8.5 5.8 13 9 15 10.4 19 12.5 45	Frequency-(Hz)           2000         -           1000         -           600         -           500         -           360         -           350         -	- 0 0 0 0 0 0 0 0 0 0 0	J240 	J250      0 0 0 0 0 0 0 0 0 0 0 0 0		C10 - 0 0 0 0 0 0 0 0 0 0 0 0 0	K030    0 0 0 0 0 0 0 0 0 0 0 0 0	- - - - - - 0 0 0 0 0 0 0	- - - - - - - 0 0 0 0 0 0	K125       0 0 0 0 0	- - - - - - 0 0 0		- - - - - - - - - - - - - - - 0
TBV-125A           TBV-125M           TBV-315A           TBV-315M           TBV-400A           TBV-500M           TBV-500A           TBV-630A           TBV-630A           TBV-630A           TBV-800A           TBV-800A	(mm) 125×125 t 20 315×315 t 30 400×400 t 30 500×500 t 40 630×630 t 45 800×800 t 70	(kg) 0.9 0.6 8.5 5.8 13 9 15 10.4 19 12.5 45 30	Frequency- (Hz) 2000 - 1000 - 600 - 500 - 360 -	- 0 0 0 0 0 0 0 0 0 0 0 0 0	J240 	J250                       0           0           0           0           0           0           0           0           0           0           0           0           0           0           0           0           0           0		C10 - - - - - - - - - - - - -	K030                    0	- - - - - - - 0 0 0 0 0 0 0 0 0 0		K125       0 0 0 0 0 0 0 0 0 0	- - - - - - - 0 0 0 0		- - - - - - - - - - - - - - 0 0
TBV-125-□-A           TBV-125-□-M           TBV-315-□-A           TBV-315-□-M           TBV-400-□-A           TBV-500-□-A           TBV-500-□-A           TBV-630-□-A           TBV-630-□-A           TBV-630-□-A           TBV-630-□-A           TBV-630-□-A           TBV-630-□-A           TBV-630-□-A           TBV-800-□-A           TBV-800-□-A           TBV-800-□-A           TBV-800-□-A           TBV-800-□-A	(mm) 125×125 t 20 315×315 t 30 400×400 t 30 500×500 t 40 630×630 t 45 800×800 t 70 1000×1000	(kg)           0.9           0.6           8.5           13           9           15           10.4           19           12.5           45           30           110	Frequency-(Hz)           2000         -           1000         -           600         -           500         -           360         -           350         -	- 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	J240 	J250                       0		C10 - - - - - - - - - - - - -	K030           -           -           -           0	- - - - - 0 0 0 0 0 0 0 0 0 0 0 0 0	- - - - - - - - - - - - - - - - - - -	K125       -       -       -       -       -       -       -       -       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0	- - - - - - - 0 0 0 0 0 0		- - - - - - - - - - - - - - - 0 0 0


Model names ending with "A" indicate aluminum body and "M" indicate magnesium alloy. Add the vibration generator type where " \*The data shown refers to the IMV standard range. Custom designs can also be supplied.






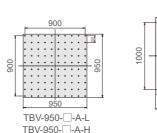



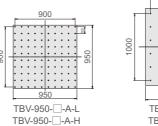



TB\ TB\ TB\ TB\ TB\ TB\ TB\ TB\ TB\ TBV

#### Options for use with vertical tables

#### Guide system, additional air spring

The following option increases the allow- Guide system able overturning moment of the head expander.

- Additional guide system Enabling larger or off-centre specimens to be tested.
- Additional air spring Providing additional load support to accommodate higher specimen & fixture mass.

\*Some models do not support the options above

Vibration generator

#### Cubic fixture

The specimen can be fastened to the top or the side face of the cubic fixture where testing in each axis is required. Two types of cubic fixture are available. Type A has fixing holes on each face, Type B has specimen mounting plates which attach to the cubic frame.

Type A Vibration

150×150×150

160×160×160

200×200×200

 $250 \times 250 \times 250$ 

300×300×300

TCJ-A150- -A

TCJ-A150- 🗌 - M

TCJ-A160- 🗌 - A

TCJ-A160- 🗌 - M

TCJ-A200- 🗌 - A

TCJ-A200- 🗌 - M

TCJ-A250- 🗌 - A

TCJ-A250- - M

TCJ-A300- 🗌 - A

TCJ-A300- 🗌 - M



Cubic fixture

5.5

4

6.5

4.6

8

5.6

13.5

9.5

20

14

2000

2000

1000

650

400

Model
TCJ-B150-
TCJ-B150-
TCJ-B160-
TCJ-B160-
TCJ-B200-
TCJ-B200-
TCJ-B250-
TCJ-B250-
TCJ-B300-
TCJ-B300- 🗌 -

Model names ending with "A" indicate aluminum body and "M" indicate magnesium alloy. Add the vibration generator type where "




Model	Dimensions (mm)	Mass (kg)	Maximum Frequency (Hz)	Specimen Mounting Screw	Screw Pitch
V-350-□-A-L	350×350×t 33	6	750	M10 Depth 25	100 mm Pitch
V-350-□-A-H	350×350×t65	11	1500	M10 Depth 25	100 mm Pitch
V-550-□-A-L	550×550×t 30	17	300	M10 Depth 25	100 mm Pitch
V-550-□-A-H	550×550×t60	30	600	M10 Depth 25	100 mm Pitch
V-750-□-A-L	750×750×t 38	30	200	M10 Depth 25	100 mm Pitch
V-750-□-A-H	750×750×t75	55	400	M10 Depth 25	100 mm Pitch
V-950-□-A-L	950×950×t 45	45	150	M10 Depth 25	100 mm Pitch
V-950-□-A-H	950×950×t 90	80	300	M10 Depth 25	100 mm Pitch
V-1150- 🗌 - A-L	1150×1150×t 60	90	120	M10 Depth 25	200 mm Pitch
V-1150- 🗌 - A-H	1150×1150×t 120	160	240	M10 Depth 25	200 mm Pitch


Model names ending with "A" indicate aluminum body. Add the vibration generator type where "
]" is shown. Please contact us for more information.

#### High-frequency model



A head-expander having exceptionally low mass and special dual conical shape giving excellent damping.

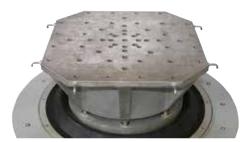

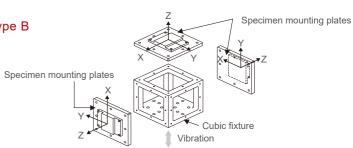

3.5 TCJ-B150-P-A 1.5 150×150×150 2000 2.5 TCJ-B150-P-M 1.1 TCJ-B160-P-A 1.7 4 160×160×160 2000 2.8 TCJ-B160-P-M 1.3 10 TCJ-B200-P-A 3.5 200×200×200 2000 TCJ-B200-P-M 2.5 7 20 TCJ-B250-P-A 4.5 250×250×250 1000 TCJ-B250-P-M 14 3.2 20 TCJ-B300-P-A 6.5 300×300×300 600 TCJ-B300-P-M 14 4.5

# **Optional Units**

Slip table

#### Slip table

A slip table is required for testing a specimen along its horizontal axis, or when a heavy specimen is to be tested. Slip tables are designed to achieve low friction in the driven axis, while supporting heavy loads and introducing minimal waveform distortion.



#### Type and features of slip table

#### MB: Mechanical Bearing

Mechanical bearing employs the linear motion guide which incorporates a component with a linear rolling motion into practical use. It significantly contributes to high performance of table which are high-rigidity, high load and long stroke motion. Another strong feature of the mechanical bearing is easy to operate. Since it is light weighted and no need for a hydraulic unit.

	TBH-550-□-A-MB					
Moment (N•m)		9300				
Maximum Load (kg)		1000				
Vibration Generator	Moving Mass* (kg)	Frequency (Hz)	Table Thickness (mm)			
A11	46	2000	20			
A22	47	2000	30			

Model	ТВ	H-550-□-A-N	ИB	ТВ	H-750-□-A-I	MB	ТВ	H-950-□-A-N	ИB	TBI	H-1150-□-A-	MB
Table Size (mm)												
Moment (N·m)		9300			12700			19700			51500	
Maximum Load (kg)		1000			2000			2000			2000	
Vibration Generator	Moving Mass* (kg)	Frequency (Hz)	Table Thickness (mm)									
A30	47	2000		75	2000		106	0000		151	0000	
A45	54	2000	30	87	2000	30	114	2000	30	160	2000	40
A65/A74		2000*1		01	2000*1		114	2000*1	1	100	2000*1	1

\*1 Above 1600 Hz, the force rolls-off at a rate of -6db/oct.

\*The weight is referring the plate made of aluminum

\*□ is the model number of the vibration generator. \*Please contact us about the table size over 1150 × 1300.

#### ST: Oil Film Type

It is supported on oil film. Constantly create oil film at reverse side of the table letting the table slide with low friction. Pump oil unit is located in the slip table base. Since moving mass is small, it becomes one of the most standard slip table with substantial sales record.

Model	TB	3H-500-□-A-S	ST	TE	3H-630-□-A-\$	ST	TE	H-800-□-A-8	ST	TB	H-1000-□-A-	ST
Table Size (mm)												
Pitch Moment (N·m)		200			400			800			1300	
Maximum Load (kg)		200			300			400			500	
Vibration Generator	Moving Mass* (kg)	Frequency (Hz)	Thickness (mm)									
i210		2500					-	-	-	-	-	-
i220	33	2500	30	45		30	65		30	100		30
K030		2000			2000		00	2000	30	100	1250	30
K060	60	2000	50	80		50	115	2000	50	170	1250	50
K080	-	-	-	00		50	115		50	170		50

\*The material of slip plate is aluminum alloy. It is possible to change to magnesium. Please contact us for more information. \* is the model number of the vibration generator

#### TT-L: Hydrostatic Bearing (Low Pressure)/TT-H: Hydrostatic Bearing (High Pressure)

Locating multiple hydrostatic bearing on high rigid base to support slip table. Special purpose designed hydrostatic bearing realizes high load and allowable eccentric moment.

#### TT-L: Hydrostatic Bearing (Low Pressure)

Model	TBH-	500-□-	A-TTL	TBH-6	630-□-/	A-TTL	TBH-8	800-□-/	A-TTL	TBH-1	000-🗆-	A-TTL	TBH-1	200-□-	A-TTL	TBH-1	500-🗆-	A-TTL	TBH-1	800-□-	A-TTL	TBH-2	000-🗆-	A-TTL
Table Size (mm)					30 × 63									00 × 12									00 × 20	00
Pitch Moment (N · m)	)	1100			1100			2200			2200			4600			6500			10000			10000	
Maximum Load (kg)		700			1000			1000			1500			2000			2000			2500			2500	
Vibration Generator	Moving Mass* (kg)	Frequency (Hz)	Thickness (mm)	Moving Mass' (kg)	Frequency (Hz)	Thickness (mm)	Moving Mass* (kg)	Frequency (Hz)	Thickness (mm)	Moving Mass* (kg)	Frequency (Hz)	Thickness (mm)												
i210 i220	40 43	2000		53 55	2000		75 78	1600		105 108														
J230 J240	50	1600	30	63	1600	30	85	1250	30	118	1000	30	280	900	50	450	800	50	650	600	50	800	500	50
J250 J260	70	1000	40	85	1600	40	115	1250	40	155		40												

\*The material of slip plate is aluminum alloy. It is possible to change to magnesium. Please contact us for more information. \* 🗆 is the model number of the vibration generator.

	TBH-		A-TTL			A-TTL	TBH-9		A-TTL
Pitch Moment (N·m)		1100			2200			2200	
Maximum Load (kg)		1000			1500			1500	
Vibration Generator	Moving Mass* (kg)	Frequency (Hz)	Thickness (mm)	Moving Mass* (kg)	Frequency (Hz)	Thickness (mm)	Moving Mass* (kg)	Frequency (Hz)	Thickness (mm)
A11	52								
A22	53			-	-	-	-	-	-
A30	- 55	2000	30	78			105		
A45				89	1600	30	115	1000	30
A65/A74	64	2000*		0.5			115		

\*Above 1600 Hz, the force rolls-off at a rate of -6db/oct. \* is the model number of the vibration generator.

#### TT-H: Hydrostatic Bearing (High Pressure)

Model	TBH-5	500-□-/	A-TTH	TBH-6	630-□-/	A-TTH	TBH-8	800-□-/	A-TTH	TBH-10	000-□-	A-TTH	TBH-1	200-□-	A-TTH	TBH-1	500-□-	A-TTH	TBH-1	800-□-	A-TTH	TBH-2	000-□-	A-TTH
Table Size (mm)					30 × 63									00 × 12			00 × 15							00
Pitch Moment (N · m)		4000			4000			7700			7700			16000			22000			48000			48000	
Maximum Load (kg)		800			1200			1600			2000			2000			2000			3000			3000	
Vibration Generator	Moving Mass* (kg)	Frequency (Hz)	Thickness (mm)																					
i210	60	2000		70	2000		115	2000		165	1250													
i220	63	2000		83	2000		118	2000		168	1250													
J230	68			88		]	125		]	175		]												
J240	70	1600		90	1600		130	1250		178	1000													
J250	83			100			143	1230		188	1000													
J260	0.5		50	100		50	145		50	100		50	280	900	50	450	800	50	650	600	50	800	500	50
K030	68		50	88		50	123		50	173														
K060	93	2000		108	2000		145	2000		193	1250													
K080	78	2000		95	2000		133	2000		180	1230													
K125	103			118			155			205														
K125LS	113	1600		128	1600		170	1250		220	1000													

\*The material of slip plate is aluminum alloy. It is possible to change to magnesium. Please contact us for more information. \*

Model	TBH-5		A-TTH			A-TTH	TBH-9		A-TTH
Table Size (mm)									
Pitch Moment (N · m)		4000			7700			7700	
Maximum Load (kg)		1200			2000			2000	
Vibration Generator	Moving Mass* (kg)	Frequency (Hz)	Thickness (mm)	Moving Mass* (kg)	Frequency (Hz)	Thickness (mm)	Moving Mass* (kg)	Frequency (Hz)	Thickness (mm)
A11	52								
A22	53	1		-	-	-	-	-	-
A30	33	2000	30	78			105		
A45				89	1600	30	115	1000	30
A65/A74	66	2000*		03			115		

\*Above 1600 Hz, the force rolls-off at a rate of -6db/oct. \* is the model number of the vibration generator.

# **Optional Units**

Watch the YouTube video

G20 K

部和


Slip table

#### (5) TH: Hydrostatic Bearing & Oil Film (A-series Only)


Slip table for A-series provides the following features with a newly developed hydrostatic and hydraulic bearing and new structure.

#### [Features]


- High moment resistance
- Low cross-axis acceleration
- Low distortion
- No requirement for a separate hydraulic unit
- Good work efficacy
- Smaller system installation space

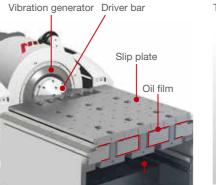

Oil tank

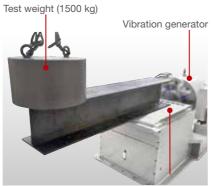


Allowable eccentric moment verification test

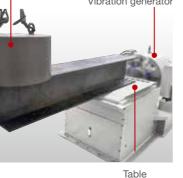



#### 3. Duct

A newly developed duct is provided as standard. No operation needed for direction change between vertical and horizontal. Space behind the shaker is minimised.

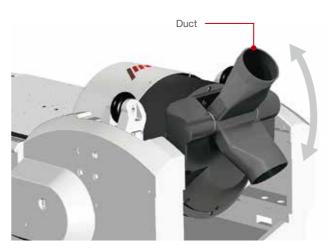





	Model	TBH-5	50TH	TBH-7	'50TH	TBH-9	950TH	TBH-1	150TH	TBH-1	450TH
	Table Size (mm)								1150	1450>	1450
	Thickness (mm)	5	0	5	0	5	0	5	0	5	0
	Pitch Moment (N·m)	60	00	660	000	850	000	850	000	198	000
	Maximum Load (kg)	15	00	90	00	90	00	90	00	90	00
	Vibration Generator	Moving Mass* (kg)	Frequency (Hz)								
	A11										
	A22	85	2000	159		215		298		452	
	A30				2000		1250		800		500
	A45				2000		1200		000		500
_	A65	_	-	180		236		318		473	
	A74										

\*The weight is referring the plate made of aluminum.

#### (6) T-Film bearing range

The T-Film bearing from Team Corporation is probably the most advanced design of linear bearing available to the vibration-test industry.

The slip table employs a number of bearings, each consisting of a U.S. patented bearing element and hydro-static oil film.

T-Film bearings provide excellent vibration waveform linearity and are considered to be the best solution for the aerospace industry and research establishments.




Option for slip table

#### 1. Rotation reduction gearing

A reduction gearing unit enabling easier reconfiguration of the vibration generator. \*i210 doesn't have this option.

#### 2. Motor drive rotation

Powered rotation of the vibration generator. The motor-driven rotation can be optionally installed on systems equipped with reduction gearing.

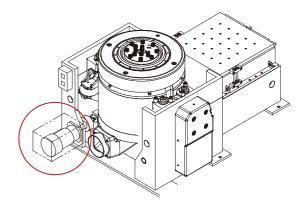

#### 4. Drive bar adapter with diagonal bolt access

Method of fastening drive bar to a slip table was simplified by reflecting customers feedback.

Usability is improved and easier torque management of bolts is realized. \* Standard for MB/MS



# **Optional Units**

Fixture, Vibration Isolation, Reinforcement

#### **Fixture**

IMV has a range of fixtures, such as cube and 'L'-shaped types, to suit most applications. Customised fixtures are supplied, designed and analysed using finite-element modeling to ensure best performance.



#### **Vibration Isolation**

Additional isolation mounts are available to reduce the effects of vibration on the floor and adjacent equipment.

#### Insulation pad

These are simple to install by placing under the vibration generator.




#### Air spring

Air spring placed under each corner of the frame support the vibration generator and are an excellent way to isolate vibration above about 5 Hz.

#### Reinforcement

Load spreader base

The weight of the vibration generator can be distributed over a larger area where such load is acceptable.

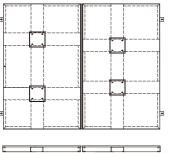



# **Optional Units**

Sound-proof enclosure, Cooling ducting, Launcher, System monitor

#### Sound-proof enclosure

A sound-proof enclosure for the cooling blower reduces noise in installations where the blower cannot be located outside the work area.



inside

#### Launcher

Test file will be automatically generated just on selection of the test condition defined by the test standard. Then, the test can be carried out just by pressing the start button.





In-built "Quick Help" provides guidance on each operation.

31

### **Cooling ducting**

The standard arrangement for air-cooled systems is to install the blower inside the work area. Ducting the input air from outside eliminates the changes in ambient pressure and temperature caused by the cooling air flow.



### System monitor

Condition of "vibration generator, amplifier test proceeding, specimen status" can be observed on the PC or tablet by either wired or wireless LAN. Solution will be seen on the Web browser on occurrence of any error. Installation of additional software is not necessary to the PC nor tablet.



Home screen

Home screen (error)



Eco screen

Camera screen

# Vibration Test Systems Multi-axis systems

» P.35

» P.36

» P.37


» P.38

» P.39

2-Axis Changeover Systems	DC-series
3-Axis Changeover Systems	TC-series
2-Axis Simultaneous Systems	DS-series
3-Axis Simultaneous Systems	TS-series
6 Degrees of Freedom Systems	TTS-series

#### **Reduced test time**

Testing in three-axis simultaneously instead of sequentially can reduce overall test time by eliminating the time taken to reconfigure the system, and time to run tests in each axis.

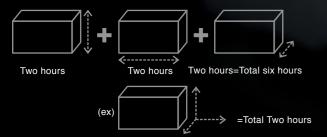

Test time reduced to one-third, or less

#### Reproduction of failure modes

Three-axis simultaneous vibration testing reproduces real environments more accurately than sequential single-axis tests can.



A single-axis system does not achieve realistic simulation of real-world vibration



Simultaneous three-axis testing reproduces the stress placed on specimens by complex resonances which may not be detected in single-axis testing.

#### ICCU (Integrated Cross Coupling Bearing Unit)


ICCU is a patented technology developed by IMV for three-axis simultaneous excitations.

Three-axis table

Pressure receiv

Bearing casing

Preload bolt

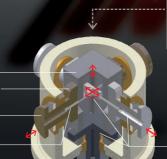



Oil film part

#### Highly accurate multi-axis multi-point control

Co.X

High-precision multi-axis, multi-point control which can compensate for rotational moments generated by the specimen and fixture and accurately reproduce the vibration measured in the field.

r	v	مسر	~~~v	m	,	sound.	www
					~_~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~		
-1	r	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	James A	~~~~	mone		may
	$\sim \sim \sim$	$\sim \sim $	$\sim \sim$	mane	$\sim$	mon	-march
m	~~~v	<u> </u>	~~~v	, mar	min	ment	m
$\sim \sim \sim$						~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	
V	m	~~v	/	man	war	winner	mand
U	N	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	mary	/			
~	- Jone - Co		And V	/~~~~	$\sim$		$\sim$
~~~N	y	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	,		/		
m	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	V	V			/	
~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~		$\sim$	$\sim$				
	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	N	<u></u>	/			/
				$\sim$			

# **DC-series** 2-Axis Changeover Systems



DC-2000-5H

#### Specifications

	System	Model	DC-1000-4H	DC-1000-6H	DC-1000-8H	DC-1000-10M	DC-2000-5H	DC-2000-8M	DC-2000-10M	DC-2000-15M	DC-3000-5H	DC-3000-8M
	Table S	ize (mm)	400	600	800	1000	500	800	1000	1500	500	800
	Deter	Sine (kN)	9.8	9.8	9.8	9.8	19.6	19.6	19.6	19.6	29.4	29.4
	Rated Force	Random (kN)	4.9	4.9	4.9	4.9	9.8	9.8	9.8	9.8	14.7	14.7
		Shock (kN)	14.7	14.7	14.7	14.7	29.4	29.4	29.4	29.4	44.1	44.1
	Maximur	m Acceleration (m/s <sup>2</sup> )	108	75	54	32	150	81	67	28	196	140
System	Maximur	m Velocity (m/s)	1	1	1	1	1	1	1	0.9	1	1
Specifications	Maximum	Displacement (mmp-p)	51	51	51	51	51	51	51	51	51	51
	Armature	e Mass (kg)	90	130	180	300	130	240	290	680	150	210
		Horizontal (Hz)	1000	800	700	350	800	500	350	250	800	500
	Frequency	Vertical (Hz)	1000	1000	700	500	800	800	500	350	800	800
		m Load (kg)	100	100	200	200	200	300	500	500	200	300
	Power R	lequirements (kVA)	25	25	25	25	43	43	43	43	52	52
	Primary (	Cooling Water ( ℓ /min)	-	-	-	-	-	-	-	-	-	-
	System	Model	DC-3000-10M	DC-3000-15M	DC-5000-6H	DC-5000-8H	DC-5000-10M	DC-5000-15M	DC-6000-6H	DC-6000-8H	DC-6000-10M	DC-6000-15M
	Table Si	ze (mm)	1000	1500	600	800	1000	1500	600	800	1000	1500

	Table Si	ize (mm)	1000	1500	600	800	1000	1500	600	800	1000	1500
		Sine (kN)	29.4	29.4	49	49	49	49	61.7	61.7	61.7	61.7
	Rated Force	Random (kN)	14.7	14.7	29.4	29.4	24.5	24.5	37	37	30.8	30.8
	1 0.00	Shock (kN)	44.1	44.1	73.5	73.5	58.8	58.8	92.5	92.5	74	74
	Maximur	m Acceleration (m/s <sup>2</sup> )	91	47	350	204	163	59	385	268	102	75
System	Maximu	m Velocity (m/s)	1	0.9	1	1	0.9	0.9	1	1	0.9	0.9
Specifications	Maximum	Displacement (mmp-p)	51	51	51	51	51	51	51	51	51	51
	Armatur	e Mass (kg)	320	620	140	240	300	820	160	230	600	820
	Maximum	Horizontal (Hz)	350	250	800	700	350	250	800	700	350	250
	Frequency	Vertical (Hz)	500	350	1000	800	500	350	1000	800	500	350
	Maximu	m Load (kg)	500	500	300	300	500	700	300	300	500	700
	Power F	Requirements (kVA)	52	52	75	75	73	73	93	93	91	91
	Primary (	Cooling Water ( ℓ /min)	-	-	195	195	190	190	230	230	225	225

\*Depending on the reference PSD or other operating conditions such as the specimen, one part of the controlled response may deviate from the reference PSD. Please contact us for more information.

# **TC-series** 3-Axis Changeover Systems



#### Specifications

	System	Model	TC-1000-4H	TC-1000-6H	TC-1000-8H	TC-1000-10M	TC-2000-5H	TC-2000-8M	TC-2000-10M	TC-2000-15M	TC-3000-5H	TC-3000-8M
	Table Si	ize (mm)	400	600	800	1000	500	800	1000	1500	500	800
	Deter	Sine (kN)	9.8	9.8	9.8	9.8	19.6	19.6	19.6	19.6	29.4	29.4
	Rated Force	Random (kN)	4.9	4.9	4.9	4.9	9.8	9.8	9.8	9.8	14.7	14.7
		Shock (kN)	14.7	14.7	14.7	14.7	29.4	29.4	29.4	29.4	44.1	44.1
	Maximur	m Acceleration (m/s <sup>2</sup> )	98	65	42	33	163	98	65	30	196	113
System		m Velocity (m/s)	1	1	1	1	1	1	1	0.9	1	1
Specifications	Maximum	Displacement (mmp-p)	51	51	51	51	51	51	51	51	51	51
	Armatur	e Mass (kg)	100	150	230	290	120	200	300	640	150	260
	Maximum	Horizontal (Hz)	1000	800	700	350	800	500	350	250	800	500
	Frequency	Vertical (Hz)	1000	1000	700	500	800	800	500	350	800	800
		m Load (kg)	100	100	200	200	200	300	500	500	200	300
	Power F	Requirements (kVA)	27	27	27	27	43	43	43	43	52	52
	Primary (	Cooling Water ( ℓ /min)	-	-	-	-	-	-	-	-	-	_
	System	Model	TC-3000-10M	TC-3000-15M	TC-5000-6H	TC-5000-8H	TC-5000-10M	TC-5000-15M	TC-6000-6H	TC-6000-8H	TC-6000-10M	TC-6000-15M
		Model ize (mm)	TC-3000-10M	TC-3000-15M	TC-5000-6H	TC-5000-8H	TC-5000-10M	TC-5000-15M	TC-6000-6H	TC-6000-8H	TC-6000-10M	TC-6000-15M
	Table Si											
	Table Si Rated	ize (mm)	1000	1500	600	800	1000	1500	600	800	1000	1500
	Table Si	ize (mm) Sine (kN)	1000 29.4	1500 29.4	□600 49	800 49	1000 49	1500 49	61.7	800 61.7	1000 61.7	1500 61.7
	Table Si Rated Force	ize (mm) Sine (kN) Random (kN)	□1000 29.4 14.7	□1500 29.4 14.7	☐600 49 29.4	800 49 29.4	1000 49 24.5	1500 49 24.5	600 61.7 37	800 61.7 37	1000 61.7 30.8	1500 61.7 30.8
System	Table Si Rated Force Maximur	ize (mm) Sine (kN) Random (kN) Shock (kN)	□1000 29.4 14.7 44.1	29.4 14.7 44.1	600 49 29.4 73.5	800 49 29.4 73.5	1000 49 24.5 58.8	1500 49 24.5 58.8	600 61.7 37 92.5	800 61.7 37 92.5	1000 61.7 30.8 74	1500     61.7     30.8     74
System Specifications	Table Si Rated Force Maximur Maximur	ze (mm) Sine (kN) Random (kN) Shock (kN) m Acceleration (m/s <sup>2</sup> )	□1000 29.4 14.7 44.1 73	□1500 29.4 14.7 44.1 43	□600 49 29.4 73.5 306	800 49 29.4 73.5 222	1000 49 24.5 58.8 158	1500 49 24.5 58.8 67	600 61.7 37 92.5 342	800 61.7 37 92.5 257	□1000 61.7 30.8 74 199	□1500 61.7 30.8 74 84
	Table Si Rated Force Maximur Maximur	ze (mm) Sine (kN) Random (kN) Shock (kN) m Acceleration (m/s <sup>2</sup> ) m Velocity (m/s)	1000 29.4 14.7 44.1 73 1	□ 1500 29.4 14.7 44.1 43 0.9	□600 49 29.4 73.5 306 1	800 49 29.4 73.5 222 1	1000 49 24.5 58.8 158 0.9	1500 49 24.5 58.8 67 0.9	600 61.7 37 92.5 342 1	800 61.7 37 92.5 257 1	1000 61.7 30.8 74 199 0.9	□1500 61.7 30.8 74 84 0.9
	Table Si Rated Force Maximum Maximum Armaturo Maximum	ize (mm) Sine (kN) Random (kN) Shock (kN) m Velocity (m/s <sup>2</sup> ) Displacement (mmp-p) e Mass (kg) Horizontal (Hz)	□1000 29.4 14.7 44.1 73 1 51	□1500 29.4 14.7 44.1 43 0.9 51	☐600 49 29.4 73.5 306 1 51	☐800 49 29.4 73.5 222 1 51	1000 49 24.5 58.8 158 0.9 51	1500 49 24.5 58.8 67 0.9 51	☐600 61.7 37 92.5 342 1 51	□800 61.7 37 92.5 257 1 51	□ 1000 61.7 30.8 74 199 0.9 51	□1500 61.7 30.8 74 84 0.9 51
	Table Si Rated Force Maximum Maximum Armaturo Maximum	ze (mm) Sine (kN) Random (kN) Shock (kN) m Acceleration (m/s²) m Velocity (m/s) Displacement (mmp-p) e Mass (kg)	□1000 29.4 14.7 44.1 73 1 51 400	□1500 29.4 14.7 44.1 43 0.9 51 680	☐600 49 29.4 73.5 306 1 51 160	☐800 49 29.4 73.5 222 1 51 220	1000 49 24.5 58.8 158 0.9 51 310	1500 49 24.5 58.8 67 0.9 51 730	☐600 61.7 37 92.5 342 1 51 180	□800 61.7 37 92.5 257 1 51 240	□ 1000 61.7 30.8 74 199 0.9 51 310	□1500 61.7 30.8 74 84 0.9 51 730
	Table Si Rated Force Maximum Maximum Armaturo Maximum Frequency	ize (mm) Sine (kN) Random (kN) Shock (kN) m Velocity (m/s <sup>2</sup> ) Displacement (mmp-p) e Mass (kg) Horizontal (Hz)	□1000 29.4 14.7 44.1 73 1 51 400 350	□1500 29.4 14.7 44.1 43 0.9 51 680 250	☐600 49 29.4 73.5 306 1 51 160 800	☐800 49 29.4 73.5 222 1 51 220 700	1000 49 24.5 58.8 158 0.9 51 310 350	□1500 49 24.5 58.8 67 0.9 51 730 250	☐600 61.7 37 92.5 342 1 51 180 800	□800 61.7 37 92.5 257 1 51 240 700	□ 1000 61.7 30.8 74 199 0.9 51 310 350	□1500 61.7 30.8 74 84 0.9 51 730 250
	Table Si Rated Force Maximum Maximum Armatur Maximum Frequency Maximum	ize (mm) Sine (kN) Random (kN) Shock (kN) m Acceleration (m/s²) m Velocity (m/s) Displacement (mmp-p) e Mass (kg) Horizontal (Hz) Vertical (Hz)	1000 29.4 14.7 44.1 73 1 51 400 350 500	1500 29.4 14.7 44.1 43 0.9 51 680 250 350	□600 49 29.4 73.5 306 1 51 160 800 1000	□800 49 29.4 73.5 222 1 51 51 220 700 800	1000 49 24.5 58.8 158 0.9 51 310 350 500	1500 49 24.5 58.8 67 0.9 51 730 250 350	□600 61.7 37 92.5 342 1 51 180 800 1000	□800 61.7 37 92.5 257 1 51 240 700 800	1000 61.7 30.8 74 199 0.9 51 310 350 500	□1500 61.7 30.8 74 84 0.9 51 730 250 350

\*Depending on the reference PSD or other operating conditions such as the specimen, one part of the controlled response may deviate from the reference PSD. Please contact us for more information.

# **DS**-series 2-Axis Simultaneous Systems



DS-2000-4H

#### Specifications

	System	Model	DS-1000-4H	DS-1000-6H	DS-1000-8H	DS-1000-10M	DS-2000-5H	DS-2000-8M	DS-2000-10M	DS-2000-15M	DS-3000-5H	DS-3000-8M
	Table Size (mm)		400	600	800	1000	500	800	1000	1500	500	800
		Sine (kN)	9.8	9.8	9.8	9.8	19.6	19.6	19.6	19.6	29.4	29.4
	Rated Force	Random (kN)	4.9	4.9	4.9	4.9	9.8	9.8	9.8	9.8	14.7	14.7
		Shock (kN)	14.7	14.7	14.7	14.7	29.4	29.4	29.4	29.4	44.1	44.1
	Maximur	m Acceleration (m/s <sup>2</sup> )	108	75	54	32	150	81	67	28	196	140
System	Maximum Velocity (m/s)		1	1	1	1	1	1	1	0.9	1	1
Specifications	Maximum	Displacement (mmp-p)	51	51	51	51	51	51	51	51	51	51
	Armature Mass (kg)		90	130	180	300	130	240	290	680	150	210
	Maximum Horizontal (Hz)		1000	800	700	350	800	500	350	250	800	500
	Frequency	Vertical (Hz)	1000	1000	700	500	800	800	500	350	800	800
	Maximum Load (kg)		100	100	200	200	200	300	500	500	200	300
	Power Requirements (kVA)		30	30	30	30	66	66	66	66	76	76
	Primary (	Cooling Water ( ℓ /min)	-	-	-	-	-	-	-	-	-	-
	System	Model	DS-3000-10M	DS-3000-15M	DS-5000-6H	DS-5000-8H	DS-5000-10M	DS-5000-15M	DS-6000-6H	DS-6000-8H	DS-6000-10M	DS-6000-15M
	Table Si	ize (mm)	1000	1500	600	800	1000	1500	600	800	1000	1500
		Sine (kN)	29.4	29.4	49	49	49	49	61.7	61.7	61.7	61.7
	Rated	Random (kN)	14.7	14.7	29.4	29.4	24.5	24.5	37	37	30.8	30.8

		. ( )										
Datad		Sine (kN)	29.4	29.4	49	49	49	49	61.7	61.7	61.7	61.7
	Random (kN)	14.7	14.7	29.4	29.4	24.5	24.5	37	37	30.8	30.8	
	1 0100	Shock (kN)	44.1	44.1	73.5	73.5	58.8	58.8	92.5	92.5	74	74
	Maximum Acceleration (m/s <sup>2</sup> )		91	47	350	204	163	59	385	268	102	75
System	Maximum Velocity (m/s)		1	0.9	1	1	0.9	0.9	1	1	0.9	0.9
	Maximum Displacement (mmp-p)		51	51	51	51	51	51	51	51	51	51
	Armature Mass (kg)		320	620	140	240	300	820	160	230	600	820
		Horizontal (Hz)	350	250	800	700	350	250	800	700	350	250
	Frequency	Vertical (Hz)	500	350	1000	800	500	350	1000	800	500	350
	Maximum Load (kg)		500	500	300	300	500	700	300	300	500	700
	Power Requirements (kVA)		76	76	104	104	106	106	126	126	128	128
	Primary Cooling Water ( l/min)		-	-	370	370	360	360	440	440	430	430

Depending on the reference PSD or other operating conditions such as the specimen, one part of the controlled response may deviate from the reference PSD. Please contact us for more information

# **TS-series** 3-Axis Simultaneous Systems



#### Specifications

	System	Model	TS-1000-4H	TS-1000-6H	TS-1000-8H	TS-1000-10M	TS-2000-5H	TS-2000-8M	TS-2000-10M	TS-2000-15M	TS-3000-5H	TS-3000-8M
	Table Si	ze (mm)	400	600	800	1000	500	800	1000	1500	500	800
	Rated Force	Sine (kN)	9.8	9.8	9.8	9.8	19.6	19.6	19.6	19.6	29.4	29.4
		Random (kN)	4.9	4.9	4.9	4.9	9.8	9.8	9.8	9.8	14.7	14.7
		Shock (kN)	14.7	14.7	14.7	14.7	29.4	29.4	29.4	29.4	44.1	44.1
	Maximur	m Acceleration (m/s <sup>2</sup> )	98	65	42	33	163	98	65	30	196	113
System	Maximu	m Velocity (m/s)	1	1	1	1	1	1	1	0.9	1	1
Specifications	Maximum	Displacement (mmp-p)	51	51	51	51	51	51	51	51	51	51
	Armatur	e Mass (kg)	100	150	230	290	120	200	300	640	150	260
	Maximum	Horizontal (Hz)	1000	800	700	350	800	500	350	250	800	500
	Frequency	Vertical (Hz)	1000	1000	700	500	800	800	500	350	800	800
	Maximum Load (kg)		100	100	200	200	200	300	500	500	200	300
	Power Requirements (kVA)		41	41	41	41	94	94	94	94	110	110
	Primary (	Cooling Water ( ℓ /min)	-	-	-	-	-	-	_	_	_	_
	System	Model	TS-3000-10M	TS-3000-15M	TS-5000-6H	TS-5000-8H	TS-5000-10M	TS-5000-15M	TS-6000-6H	TS-6000-8H	TS-6000-10M	TS-6000-15M
	Table Si	ze (mm)	1000	1500	600	800	1000	1500	600	800	1000	1500
		Sine (kN)	29.4	29.4	49	49	49	49	61.7	61.7	61.7	61.7
	Rated	Sine (kN) Random (kN)	29.4 14.7	29.4 14.7	49 29.4	49 29.4	49 24.5	49 24.5	61.7 37	61.7 37	61.7 30.8	61.7 30.8
	Rated Force	,					-	-				
	Force	Random (kN)	14.7	14.7	29.4	29.4	24.5	24.5	37	37	30.8	30.8
System	Force Maximur	Random (kN) Shock (kN)	14.7 44.1	14.7 44.1	29.4 73.5	29.4 73.5	24.5 58.8	24.5 58.8	37 92.5	37 92.5	30.8 74	30.8 74
System Specifications	Force Maximur Maximur	Random (kN) Shock (kN) m Acceleration (m/s <sup>2</sup> )	14.7 44.1 73	14.7 44.1 43	29.4 73.5 306	29.4 73.5 222	24.5 58.8 158	24.5 58.8 67	37 92.5 342	37 92.5 257	30.8 74 199	30.8 74 84
	Force Maximur Maximur Maximum	Random (kN) Shock (kN) n Acceleration (m/s <sup>2</sup> ) m Velocity (m/s)	14.7 44.1 73 1	14.7 44.1 43 0.9	29.4 73.5 306 1	29.4 73.5 222 1	24.5 58.8 158 0.9	24.5 58.8 67 0.9	37 92.5 342 1	37 92.5 257 1	30.8 74 199 0.9	30.8 74 84 0.9
	Force Maximur Maximur Armatur Maximum	Random (kN) Shock (kN) n Acceleration (m/s <sup>2</sup> ) m Velocity (m/s) Displacement (mmp-p) e Mass (kg) Horizontal (Hz)	14.7 44.1 73 1 51	14.7 44.1 43 0.9 51	29.4 73.5 306 1 51	29.4 73.5 222 1 51	24.5 58.8 158 0.9 51	24.5 58.8 67 0.9 51	37 92.5 342 1 51	37 92.5 257 1 51	30.8 74 199 0.9 51	30.8 74 84 0.9 51
	Force Maximur Maximur Armatur Maximum	Random (kN) Shock (kN) n Acceleration (m/s <sup>2</sup> ) m Velocity (m/s) Displacement (mmp-p) e Mass (kg) Horizontal (Hz)	14.7 44.1 73 1 51 400	14.7 44.1 43 0.9 51 680	29.4 73.5 306 1 51 160	29.4 73.5 222 1 51 220	24.5 58.8 158 0.9 51 310	24.5 58.8 67 0.9 51 730	37 92.5 342 1 51 180	37 92.5 257 1 51 240	30.8 74 199 0.9 51 310	30.8 74 84 0.9 51 730
	Force Maximur Maximum Armatur Maximum Frequency	Random (kN) Shock (kN) n Acceleration (m/s <sup>2</sup> ) m Velocity (m/s) Displacement (mmp-p) e Mass (kg)	14.7 44.1 73 1 51 400 350	14.7 44.1 43 0.9 51 680 250	29.4 73.5 306 1 51 160 800	29.4 73.5 222 1 51 220 700	24.5 58.8 158 0.9 51 310 350	24.5 58.8 67 0.9 51 730 250	37 92.5 342 1 51 180 800	37 92.5 257 1 51 240 700	30.8 74 199 0.9 51 310 350	30.8 74 84 0.9 51 730 250
	Force Maximur Maximur Armatur Maximum Frequency Maximur	Random (kN) Shock (kN) n Acceleration (m/s <sup>2</sup> ) n Velocity (m/s) Displacement (mmp-p) e Mass (kg) Horizontal (Hz) Vertical (Hz)	14.7 44.1 73 1 51 400 350 500	14.7 44.1 43 0.9 51 680 250 350	29.4 73.5 306 1 51 160 800 1000	29.4 73.5 222 1 51 220 700 800	24.5 58.8 158 0.9 51 310 350 500	24.5 58.8 67 0.9 51 730 250 350	37 92.5 342 1 51 180 800 1000	37 92.5 257 1 51 240 700 800	30.8 74 199 0.9 51 310 350 500	30.8 74 84 0.9 51 730 250 350

\*Depending on the reference PSD or other operating conditions such as the specimen, one part of the controlled response may deviate from the reference PSD. Please contact us for more informat

37

TS-1000-4H

# **TTS**-series 6 Degrees of Freedom Systems




#### 6 degrees of freedom systems

At least 6 vibration generators are located in 3D space with integrated control are employed to create or simulate 6 degrees of freedom motion (3 translation degrees of freedom and 3 rotating degrees)

In addition to X, Y, Z axis motion, rotational motion, Roll, Pitch and Yaw is also available utilising spherical bearings.

Using electro dynamic vibration generators, IMV systems can reproduce waveforms which have components in a wide frequency range with a high degree of accuracy. System maintenance is easy. Systems comprise at least six vibration generators to act along orthogonal axes and also to generate the roll, pitch and yaw components of vibration. The spherical bearings are used to allow such rotational motions. By using electrodynamic vibration generators the system can operate over a wide frequency range with a high degree of accuracy. No preparatory operation in nessessary.

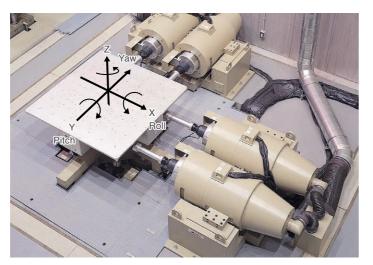

#### Ride comfort evaluation system

example.



#### Large-scale 6 DOF vibration test system

A total of 10 vibration generators (6 vertical and 4 horizontal) and a 4000 mm by 3500 mm large size table allow the simultaneous 6 DOF vibration testing. This versatile platform is ideal for testing large items such as railway carriage components.



6 DOF simultaneous squeak and rattle test system for vehicle seats Air-cooled vibration test system for the evaluation of squeak and rattle noise from an instrument panel or other car interior assemblies.



39

#### The addition of rotational motion to a three-axis system enables 6 degree-of freedom testing, as is required for vehicle seat evaluation, for

Excitation Direction	X axis	Y axis	Z axis		
Rated Force (kN)	3.9	7.8	16		
Maximum Displacement (mmp-p)	150	150	100		
Frequency Range (Hz)	1-100				
Table Size (mm)	1800×1800				
Vibration Generator	1	2	4		

(Per 1 system)

Check the movie on YouTube



Excitation Direction	X axis	Y axis	Z axis		
Rated Force (kN)	80	48	96		
Maximum Displacement (mmp-p)	51				
Frequency Range (Hz)	2-150				
Table Size (mm)	4000×3500				
Vibration Generator	2	2	6		

(Per 1 system)

Excitation Direction	X axis	Y axis	Z axis		
Rated Force (N)	1600 1600		3200		
Maximum Displacement (mmp-p)	30				
Frequency Range (Hz)	5-100				
Table Size (mm)	1500×3500				
Vibration Generator	2	2	4		

(Per 1 system)


# Vibration Test Systems Environmental Test Systems

Manufactured products can be exposed to both thermal and mechanical stresses. These should not be considered separately, as the effects may be linked. IMV can supply vibration-test systems combined with climatic chambers to provide complete vibration, temperature and humidity environmental testing. These systems can be custom-designed to meet your application.

## **Chamber for Vertical Excitation**



Docking image of combined systems

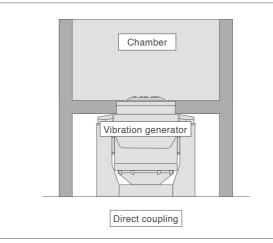






Inner pressure regulator:Reduce internal pressure fluctuation caused by vibration (Standard equipment)

#### Model : Syn-3HA-40-V

Internal dimensions	W1000×D1000×H1100 mm			
Temperature range	-40 °C - +150 °C			
Humidity range	20 % - 95 %RH			
Temperature pull down time	+20 °C => -40 °C In 60 minutes (Curve gradient)			
Temperature heat up time	-40 °C => +150 °C In 90 minutes (Curve gradient)			

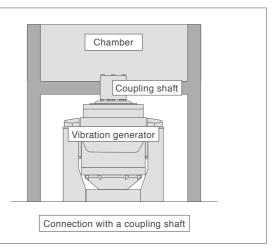

#### Model : Syn-6HW-30-V

Internal dimensions	W1800×D1900×H1500 mm
Temperature range	-30 °C - +80 °C
Humidity range	30 % - 95 %RH
Temperature pull down time	+45 °C => -30 °C In 35 minutes (Curve gradient)
Temperature heat up time	-30 °C => +80 °C In 25 minutes (Curve gradient)


## **Chamber for both Vertical and Horizontal Excitation**

Horizontal slip table combined vibration test system. Combining a rail support for horizontal move and a lift support for vertical move, chamber combined test for both vertical and horizontal axis.





Rail and lift support

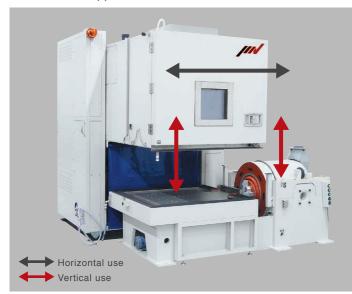

Horizontal use

#### Model : Syn-3HA-70-VH

Internal dimensions	W1000×D1000×H1000 mm
Temperature range	-70 °C - +180 °C
Humidity range	20 % - 98 %RH
Temperature pull down time	1 °C/minutes or more (Curve gradient)
Temperature heat up time	2 °C/minutes or more (Curve gradient)



Check the movie on YouTube

Option for chambers for both vertical and horizontal excitation

#### **Optional crane**

Adding a dedicated crane provides safe and simple loading and unloading of test specimens.



#### Side window

With a side window, chamber combination docking is possible with the specimen attached to the vibration generator for vertical excitation use.



#### Optional crane and observation door

The vertical base can be attached and detached using the optional crane with the head expander straying mounted on the vibration generator.

In addition, operator-friendly environment means such as observation door and body suspension automatic adjustment mechanism etc are equipped.



#### Cable bear

Cables and water pipes put together with the cable bear provide safe work environment.



## **Chamber for Multi-Axis Excitation**

Temperature, humidity chamber for multi-axis vibration test system.

Total test time can be reduced by eliminating conventionally needed time to reconfigure for testing each axis.


#### 2-axis



Model : Syn-4HA-40-M				
Internal dimensions	W1200×D1200×H1000 mm			
Temperature range	-40 °C - +150 °C			
Humidity range	20 % - 98 %RH			
Temperature pull down time	+20 °C => -40 °C In 80 minutes (Load condition:combined + aluminum 60 kg)			
Temperature heat up time	-40 °C => +150 °C In 80 minutes (Load condition:combined + aluminum 60 kg)			

## **Prefabricated Chamber for Large Specimens**

Large-sized specimen can be tested by a chamber combined test in both vertical and horizontal axis.

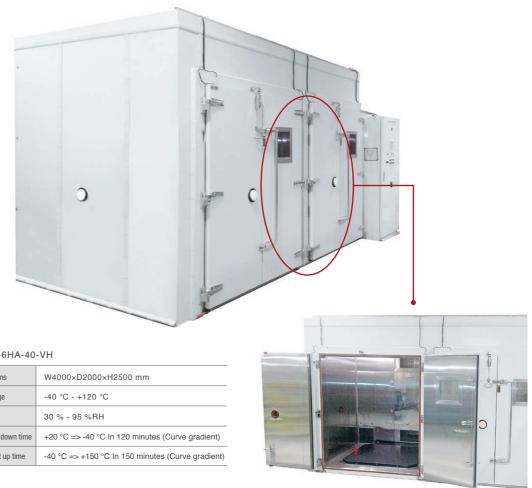

#### Model : Syn-6HA-40-VH

Internal dimensions	W4000×D2000×H2500 mm
Temperature range	-40 °C - +120 °C
Humidity range	30 % - 95 %RH
Temperature pull down time	+20 °C => -40 °C In 120 minutes (Curve gradient)
Temperature heat up time	-40 °C => +150 °C In 150 minutes (Curve gradient)






#### Model : Syn-3HA-40-M

-	
Internal dimensions	W1000×D1000×H1000 mm
Temperature range	-70 °C - +180 °C
Humidity range	20 % - 98 %RH
Temperature pull down time	+20 °C => -70 °C In 40 minutes (Curve gradient)
Temperature heat up time	-70 °C => +180 °C In 40 minutes (Curve gradient)

#### Docking image of combined systems

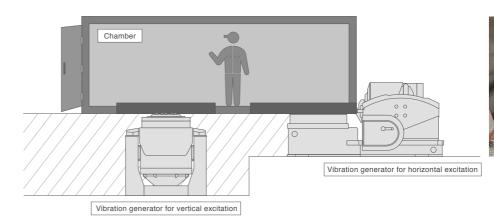



## **Climatic Chamber Controllers**

#### Chamber controller

#### 8.4-inch touch panel

Clear display of information and buttons on the 8.4-inch touch-panel.



#### Program editable in PC

Setting-up a test can be performed using a spreadsheet. Programs use the standard CSV file format.

		Data	Import	Data E	port						
	ſ				S	etting range	2				
			-50.0 °C	20 %RH	0	0					
		or	5	- 5	5	5	or	or	or	or	
	L	1	150.0 °C	98 %RH	9999	59	1	1	1	1	
1	Step No.	SET	Temp.	Humi. I	Hour	Min.	Vb.	Out1	Out2	Out3	
i	Step 0	SET	0.0 °C	0 XRH	0	0		-			
1	Step 1		0.0 °C	6 %RH	0	0			1		
1	Step 2		0.0 °C	0 %RH	0	0					
3	Step 3		0.0 °C	8 XRH	0	0		12	1 3		
	Step 4		0.0 °C	0 %RH	0	0.		5	0	1.000	
1	Step 5		0.0 °C	0 %RH	0	- 0					
1	Step 6		0.0 °C	0 XRH	0	0			1	Constraints of	
1	Step 7		0.0 °C	8 %RH	0	0			1 D	-	
1	Step 8		0.0 °C	0 KRH	0						
đ	Step 9		0.0 °C	0 XRH	0	0					
đ	Step 10		0.0 °C	0 KRH	0	0		24	0	10	

#### System monitor (option)

Connected to system monitor by Ethernet. The test status of both vibration generator and chamber can be monitored remotely.

111		20 ISI D2 I 24 - 14:05
A Home		
💋 Eco	200 572 200 572 572 572 572 572 572 572	
Chamber	Humidity 46 %	
Camera		
? Help		
	100 100 000 200 200 200 200 200 200 200 200 2	


#### Program selection

Up to 100 programs can be stored in memory. Selecting the program to be used is straightforward.

14:45	Program setting Stop	TOP
Program No	3 Program name CCC	Menu
Step No Sete 000 001 002 003 003	Incol         Nod         Nod         Nod         Vel         Out         Out </td <td>Room Lamp</td>	Room Lamp
Program call Program call from External	Program save Program clear Program save to External	
Program No. Select	USB Removal	Back


#### Program confirmation

Progress of the test is confirmed by tabular and graphical displays.

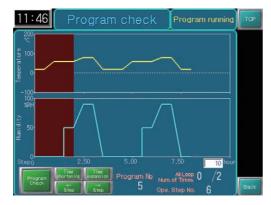

#### Integrated control system (option)

Vibration generator, chamber and other equipments can be controlled at one place.

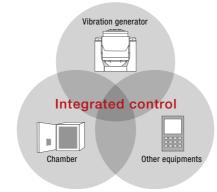

## Option

Many options are available to make easier such operation as different door positioning and observation window location.


#### Observation door

An observation door enables monitoring of the test specimen.





Safety measures for fuel cell tests

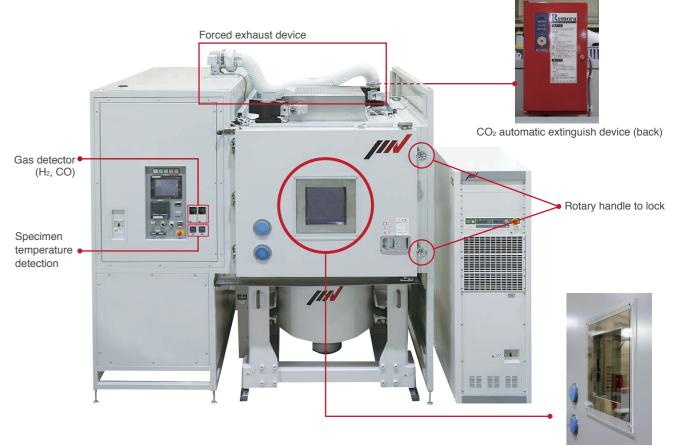

47

#### Infrared irradiation

Car instrumental panel, door, bumper,



#### Ceiling observation window

A ceiling observation window allows full visibility of the vibration table and test specimen with no blind-spots.



Scattering prevention panel

# Vibration Controller K2+

ANDA FXFREE

ROR

-

.


R DIGEN-

Common hardware supports all types of vibration test.

The K2+ controller provides the precision and repeatability required to test with confidence during both product development and series production. The K2+ hardware and software has been developed in-house, giving IMV full design control of this important part of a vibration system. The K2+ system offers enhanced functions and operability based on the most advanced technologies and incorporating feedback from our customers.

# Vibration Controller

System Composition

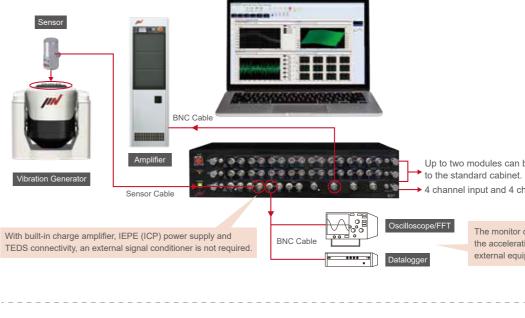



#### Hardware Specifications

Minimum Specifications of PC

Memory required (for 8 input channels)

number of I/O channels, etc.

One USB port (necessary for protect device)

4 GB or more

Number of Slots	3		
AC Power	Single-phase AC, 100 V-240 V (auto-selected)		
External Communication	Contact I/O (for emergency stop)		
Ambient Conditions	0-40°C, below 85% RH, non-condensing		
Dimensions	W430 × H100 × D383 mm (not including projecting parts)		
Mass	Approximately 7.0 kg		

One LAN port Gigabyte ethernet port and Gigabyte ethernet cable

Microsoft Windows 10 Pro (64 bit) or Windows 10 IoT Enterprise (64 bit)\*

Resolution of monitor and PC required 1280 x 1024 or more
 Recommended OS and memory vary depending on software, options,

				annel Input and Output Module (standard)	8-channel Input Module (option)			
		Number of Channels	4 8		8			
		Input Connector	BNC					
		Input Signal	Charge, Voltage, IEPE					
		Charge Amplifier Sensitivity		1.0 mV/pC o	or 10 mV/pC			
		Charge Amplifier Cut-off		0.32 Hz				
	_	Maximum Input	Charge Input	±10000 pC or ±1000 pC				
	0		Voltage Input	±10000 mV				
	Section		IEPE input	±10000 mV				
		Sampling Frequency		102.4 kHz maximum				
	nput	Voltage Input Coupling	AC or DC					
	du	AC Coupling Cut-off	0.1 Hz					
	_	CCLD Amplifier (IEPE)	+24 VDC, 3.5 mA					
		TEDS (IEPE)	Version 0.9, Version 1.0					
		A/D Converter	Туре	ΔΣ				
)*.			Resolution	32 bit				
			Dynamic range	121 dB				
			Digital filter	Pass-band ripple: +0.001,	, -0.06 dB, Stop-band attenuation: 85 dB			
		Number of Channels		is reserved for drive output)				
	_	Output Connector	BNC					
	ection	Output Signal	Voltage					
	sct	Maximum Output	±10000 mV					
	Š	Sampling Frequency	102.4 kHz m					
	rt	D/A Converter	Туре	ΔΣ				
	Output		Resolution	32 bit				
	0		Dynamic range	120 dB				
			Digital filter	Pass-band ripple: ±0.005 dB Stop-band attenuation: 100 dB				

\*Please note that optional software "Program K2+" used for vibration controller K2+ also requires Japanese government export license (E/L).

Vibration Test Systems	Vibration Controller
------------------------	----------------------

Up to two modules can be added as an option → to the standard cabinet. → 4 channel input and 4 channel output module are standard.

> The monitor output provides a conditioned version of the acceleration signal which can be monitored by external equipment, e.g. oscilloscope or datalogger.



#### Intuitive Operation

#### Launcher




Easily-recognised icons are used for file management.

\* Standard for A-series and K-series

Scheduler

Test standard

A test file will be automatically generated upon selection of the test conditions defined by the test standards \*Please refer to the following for the test standards.

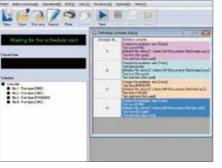

Several different tests types are executed automatically and in sequence according to the pre-defined schedule.

#### Optional Test Standard

The main test standards stored in the Launcher software (Ver 22.2.0.0 onwards) are as follows as of December 2022. The Launcher software is an option for the K2.

JIS D 1601     Automotive parts simulated long-life test       JIS E 4031     Railway vehicle parts functional test, Simulated long-life test       JIS Z 0200     Transportation test       JIS Z 0232     Transportation test (Random)		
JIS Z 0200 Transportation test		
JIS Z 0232 Transportation test (Random)	Transportation test	
JASO D 014 Automotive parts functional test		
ASTM Transportation test		
UN Lithium-ion battery test recommendated by UN		
ISO16750 Automotive parts test		
ISO12405 Electric vehicle		
IEC60068 Sine, Random, Shock	Sine, Random, Shock	
IEC62660 Random, Shock for secondary lithium-ion cells of electric vehicles		
ISTA Transportation test		
IEC61373 Railway vehicle parts functional test		
ISO13355 Transportation test (Random)		
ISO4180 Transportation test		
ISO19453 Electric vehicle parts		
JIS E 3014 Parts for railway signal		
EIA 364 Electrical connector performance test		
· · · ·	*Version upgrade will incur an additional cost.	

#### K2 Related Products

### **K2** Sprint



Mass: Approx. 2.0 kg

While inheriting all of the performance and features of K2, K2 Sprint offers improved cost-effectiveness with 2-channel hardware.

K2 Sprint is best-suited to single monitor-channel operation.

Differences from K2 • Input 2 channels (No expansion) • Output 2 channels (No expansion)

### K2/SINE Manual Test Remote Control Box (Option)



A control box for remotely controlling digital vibration controller K2/SINE. The unit includes push buttons for test start and stop, and rotary controls for manually adjusting vibration frequency and acceleration.

#### Optional Software

#### Non-Gaussian

Random test application that can reproduce accurate vibrations closer to the real environment Actual vibrations such as transport vibrations are often non-Gaussian random vibrations in which large peaks are generated. The K2 Non-Gaussian application accurately reproduces real-world vibration having a non-Gaussian amplitude distribution.

#### Effectiveness of non-Gaussian random vibration testing

The figures on the right explain the effect of using Gaussian Random and Non-Gaussian Random control in a vibration test based on the replication of vibration measured while driving on a highway.

The PSD and rms value of the three waveforms are the same.

It is clear that the vibration reproduced by "K2/Non-Gaussian" is closer to the real measured


vibration than the vibration reproduced by "Standard Random".


Generally, the greater the acceleration, the greater the impact on the product, but "K2/Non-Gaussian" can accurately reproduce this characteristic of real-world vibration.

It can be stated that "K2/Non-Gaussian" can simulate fatigue which is closer to the real environment experienced by the product than a "Standard Random" test in this example.

#### K2 DataViewer Free software

It is the software to display result data file saved after the test of SINE, RANDOM and SHOCK. It can be used for display of test condition, result graph, or for comparison between past test data (overlapping display), generation of reports.

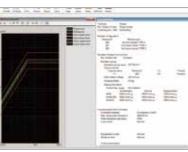

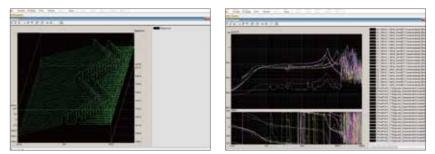



Test condition, result graph



System Requirement [Supported OS] Windows 10 (64 bit), Windows 7 (32 bit/64 bit) [Memory] More than 512 MB of RAM is recommended [Hard Disk] More than 200 MB of free space is required

Report



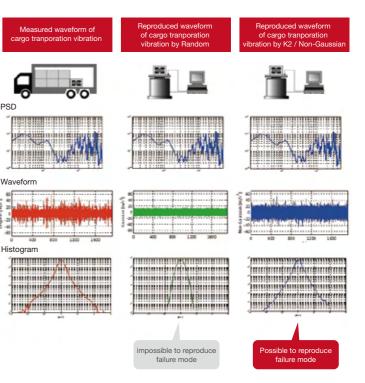

Overlapping display

3D graph



Application site

#### Software

Basic Software	Specifications	Optional software
	<ul> <li>Control Algorithm Continuous closed-loop control of true rms level</li> <li>Control Frequency Range 0.1-20000 Hz</li> <li>Control Dynamic Range More than 120 dB</li> <li>Operation Modes</li> <li>1) Continuous sweep, Spot, Manual</li> <li>2) Closed-loop, Open-loop</li> <li>Measurement Method Average, RMS, Tracking</li> <li>Multiple-Channel Control Modes Average control, Maximum control, Minimum control</li> <li>Input Channels Maximum 20</li> <li>*Specifications may be affected by other conditions</li> </ul>	<ul> <li>R_DWELL: Resonance Dwell Resonance is detected by measuring the phase difference between the control point and the response signal from a resonant part of the item under test. The test frequency is controller to maintain resonance as the structure fatigues. After holding at the resonance for a pre-defined duration, sweeping can be resumed, until the next resonance is detected.</li> <li>A_DWELL: Amplitude Dwell A transmissibility plot is taken from two points on the structure under test and resonances listed. A sine test can then be run at each resonance by either amplitude or phase.</li> <li>LIMIT CONTROL Response channels can be specified as limit control channels. If the level on a limit control channel would exceed its limit, the test level is reduced accordingly.</li> <li>Multi Sweep Sine A traditional wide-band sine sweep is divided into several narrower-band sine sweeps, which when added together combine to cover the original wide band. Running the narrow band sweeps in parallel significantly reduces the test time required.</li> </ul>
	Control Algorithm Closed-loop control of PSD within each spectral line Control Frequency Range 20 kHz Maximum Number of Control Lines Maximum 25600 lines Control Dynamic Range More than 98 dB Loop Time 200 ms (fmas = 2000 Hz, at L = 400 line) Multiple-Channel Control Modes Average control, Maximum control, Minimum control Input Channels Maximum 20 *Specifications may be affected by other conditions	<ul> <li>SOR: Sine on Random         Random vibration and sine vibration             frequencies are combined.         Sine vibration can be swept.         ROR: Random on Random      </li> <li>Broad-band random combined with sweeping         or non-sweeping narrow-band random overlaid.</li> <li>EXTENDED ROR         The extended ROR makes it possible to         operate an ROR test with greater freedom         when defining separate NBR references.     </li> <li>PSD LIMIT: PSD limit control         Response channels can be specified as limit control         channels. If the PSD on a limit control channel         would exceed its limit, the test level is reduced over         that range of frequencies to keep with the limit level         Non-Gaussian         It is a vibration testing method which precisely         reproduces non-Gaussian vibration such as         transportation vibrations with large spikes.         Soft-Clipping         A clipping function that can reduce the peak         value of the output voltage without affecting         control performance.     </li> </ul>
<image/>	Control Algorithm     Finite-length waveform controlled by feed forward method     Control Frequency Range Maximum 20000 Hz     Number of Control Lines Maximum 25600 lines     Control Dynamic Range More than 98 dB     Type of Reference Waveform Classical shock waveform (Half-sine, Haversine, Saw-tooth, Triangle, Trapezoid etc. ), Sine beat waveform, Measured waveform etc.     Input Channels Maximum 20     *Specifications may be affected by other conditions	<ul> <li>LONG WAVEFORM         The length of a reference waveform is 16 K points as standard. This can be increased to 200 K points by adding the LONG WAVEFORM option. At a sampling frequency of 512 Hz for example, this produces approximately 6.5 minutes of waveform, compared to the standard length of approximately 30 seconds.     <li>MEGAPOINT         A further increase in waveform duration can be obtained by adding the MEGAPOINT option to the LONG WAVEFORM option. This increases the record length to 5000 K points, about 163 minutes at 512 Hz sampling rate.     </li> <li>SRS: Shock Response Spectrum Can execute the test in which the test condition and evaluation are conducted not based on waveform itself, but on SRS analysis. With standard shock test selected, SRS analysis of response waveform is also possible.     </li> </li></ul>

#### Software Control Algorithm Multi SINE 1) Amplitude: Continuous closed-COMMENT OF THE BEE 2) Phase: Real-time waveform 3) Monitoring and mi - Control Frequency 0.1-10000 Hz Frequency Resolut Better than 10-4 of fre Control Dynamic Ra More than 120 dB Operation Modes 1) Continuous sweep 2) Control and moni Estimation Method Average, RMS, Tracl Multiple-Channel Co Average control, Ma Input Channels Maximum 20 (Maxim Output Channel . Maximum 12 \*Specifications may b Control Algorithm Multi RANDOM 1) PSD of random sig for each frequency 1.33665 P.8+8= 2) Real-time wavefor 3) Monitoring and m ------ Control Frequency Maximum 10000 Hz Number of Control Maximum 3200 lines Control Dynamic R More than 98 dB Loop Time 450 ms (3-input, 3-o 200 line cross-talk ir Multiple-Channel Co Average control, Max Input Channels Maximum 20 (Maxim Output Channel Maximum 12 \*Specifications may be

#### Multi SHOCK



#### Control Algorithm Finite-length wavefo Control Frequency Maximum 20000 Hz Number of Control Maximum 25600 line Control Dynamic Ra More than 98 dB Type of Reference \

- Classical shock wave Trapezoid etc.), Sine Length of Reference Maximum 5000 k po
- Input Channels Maximum 32 Output Channel Maximum 32

Common optional software			
CAPTURE: Analogue waveform signal data program	Provides analogue waveform signal capture, saved data can then be used as the reference of SHOCK, BMAC waveform controls or Random vibration PSD control.	<ul> <li>Sampling Frequer</li> <li>Data Length</li> <li>Input Channel</li> <li>Waveform edit/ana</li> </ul>	
SCHEDULER:Test scheduler	Pre-defined tests can be executed in sequence.		
TCP Communication Server	TCP communication server software that allows extern	al applications to operate K	

Specifications	Optional Software
<ul> <li>Control Algorithm (Three modes of control) <ol> <li>Amplitude:</li> <li>Continuous closed-loop control of true rms level</li> <li>Phase:</li> <li>Real-time waveform controlled by feed forward method</li> <li>Monitoring and minimising of cross-axis component</li> <li>Control Frequency Range</li> <li>1-10000 Hz</li> <li>Frequency Resolution Better than 10<sup>-4</sup> of frequency </li> <li>Control Dynamic Range More than 120 dB </li> <li>Operation Modes <ol> <li>Control and monitoring in various physical units</li> </ol> </li> <li>Estimation Method Average, RMS, Tracking </li> <li>Multiple-Channel Control Modes Average control, Maximum control, Minimum control </li> <li>Input Channel</li> <li>Maximum 20 (Maximum 20 chs for principal control channel)</li> <li>Output Channel</li> <li>Maximum 12</li> </ol></li></ul>	• LIMIT CONTROL If a response point is specified to be a limit control channel, the level of that response point will not exceed the level specified in the test.
<ul> <li>Control Algorithm (Three modes of control) <ol> <li>PSD of random signal closed loop control by spectrum density for each frequency segment</li> <li>Real-time waveform controlled by feed forward method</li> <li>Monitoring and minimising of cross-axis component</li> </ol> </li> <li>Control Frequency Range <ul> <li>Maximum 10000 Hz</li> </ul> </li> <li>Number of Control Lines <ul> <li>Maximum 3200 lines</li> </ul> </li> <li>Control Dynamic Range <ul> <li>More than 98 dB</li> </ul> </li> <li>Loop Time <ul> <li>450 ms (3-input, 3-output control, 120 DOF, fmax = 2000 Hz, L = 200 line cross-talk information averaging times = 8 times/loop)</li> <li>Multiple-Channel Control Modes <ul> <li>Average control, Maximum control, Minimum control</li> <li>Input Channels <ul> <li>Maximum 20 (Maximum 20 chs for principal control channel )</li> </ul> </li> <li>Output Channel <ul> <li>Maximum 12</li> </ul> </li> </ul> </li> </ul></li></ul>	<ul> <li>PSD LIMIT CONTROL If a response point is specified to be a limit control channel, the level of PSD doesn't exceed the specified PSD level in the test.</li> <li>Non-Gaussian It is a vibration testing method which precisely reproduces non-Gaussian vibration such as transportation vibrations with large spikes.</li> </ul>
Control Algorithm     Finite-length waveform controlled by feed forward method     Control Frequency Range     Maximum 20000 Hz     Number of Control Lines     Maximum 25600 lines     Control Dynamic Range     More than 98 dB     Type of Reference Waveform     Classical shock waveform (Half-sine, Haversine, Saw-tooth, Triangle,     Trapezoid etc.), Sine beat waveform, Measured waveform etc.     Length of Reference Waveform     Maximum 5000 k points     Input Channels     Maximum 32     Output Channel     Maximum 32     *Specifications may be affected by other conditions	• SRS: Shock Response Spectrum SRS (Shock Response Spectrum) can execute the test in which the test condition and evaluation are conducted not based on waveform itself, but on SRS analysis. With standard shock test selected, SRS analysis of response waveform is also possible.

ency 51.2 kHz maximum Maximum 5000 k points Maximum 24 nalysis function Filtering, Frequency transfer processing, PSD transfer, Transmissibility ratio between channels

K2 applications and acquire vibration data and operating status by sending and receiving commands via TCP/IP.



With IMV's approach to a more realistic reproduction of the vibration environment, IMV is focused on producing products that are customised to the specific needs of our customers. IMV is proud of our continuous contribution to improvements in product safety and comfort for the wider society through increasing product reliability as a "solution partner" for all industries.

# Customised Products [Case Studies]

### **Customised Products** Automotive Parts Case Studies





#### Electrodynamic multi-axis 4 poster system

Accurate waveform reproduction is achieved over a wide frequency range up to 500 Hz by employing electrodynamic vibration generators.



#### Torsion vibration test system

By installation of compact vibration generators on the top of a multi-axis test system and exciting both systems simultaneously, reproduction of 'real road' 6-DOF and torsion is achieved.





#### 3-axis simultaneous vibration test system

Test systems for the automotive tyre industry, used for evaluating the transfer characteristics of a tyre at varying air volumes and ride comfort.



#### Low cross axis motion vibration test system

Ensures low cross axis motion, equipped with the mechanism to match the center gravity of the assembly of specimen + fixture (+ slip table) to the excitation axis by up and down of the table support bearing assembly.

# Customised Products Automotive Parts

**Case Studies** 







#### 6-DOF vibration test system

Evaluate road noise generated by a car by placing the test system under the wheel of the car and generating vibration of 6-DOF nature in to one wheel.



#### 200 mm peak-to-peak displacement vibration test system

System is particularly suited for applications requiring high velocity at low frequencies. The system has a high over-turning moment due to 4 linear guide bearings, allowing test of specimens with a large offset centre of gravity.

#### 6-DOF large vibration test system

Reproduction of ultimate vibration realism for testing ride comfort of car seats with a 6-DOF vibration test system.



#### 6-DOF simultaneous squeak and rattle test system for instrument panels

6-DOF vibration test system with 8 compact, silent type shakers for squeak and rattle acoustic noise evaluation of instrument panels.




#### Diagonal excitation vibration test system

Diagonal excitation for two-wheeled vehicles. Angle of rotation for the vibration generator can be adjusted in 1 degree increments.



#### Environmental test system

Environmental test system combining vibration, temperature, gasoline circulation, oil circulation and rotational drive.

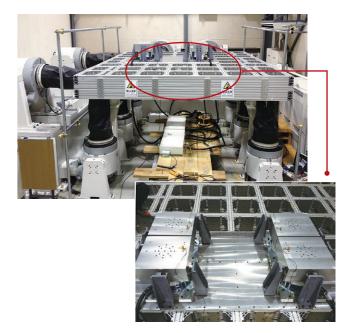

#### Torsion test system (6 DOF + Torsion vibration test system)

6 DOF vibration test with measured running data is possible. Torsion on car body during running can be simulated. Torsion exaction for car equipment.



#### Exhaust system durability testing

Durability testing with hot air and vibration. Air temperature range from 200 °C to 900 °C, air flow from 2 to 10 m<sup>3</sup>/min provided from a hot air generator is applied into the exhaust system.

# Customised Products Automotive Parts

**Case Studies** 



#### Dynamic spring constant measuring system

Highly accurate testing and analysis are possible over a wide frequency range from 1 Hz up to 2000 Hz.



#### Low acoustic noise 3-axis vibration test system + guide rail

Vibration test system can move along the guide rails. The system can be combined with other test equipment if necessary, for example a temperature chamber.



#### Low acoustic noise 3-axis vibration test system

Simulation testing using actual measured data or more traditional random testing is possible in 3-axis simultaneous excitation. When combining the shaker system with a half anechoic room, 3D squeak and rattle testing in an environment with a background noise level of less than 30 dB is possible.



#### Vertical / Horizontal changeover chamber combined vibration test system

Used for durability testing of on-board battery chargers and inverters/DC-DC converters for electric cars. Vertical and horizontal excitation, both combined with a chamber, is possible.



#### 2-axis climatic chamber combined vibration test system

Double-sided door makes easy to reach the specimen. Equipped with temperature alarm meter for surface temperature monitoring and CO<sub>2</sub> automatic fire extinguisher. Sine: 1000 Hz, Random: 2000 Hz,



#### Ultra-high temperature (900°C) chamber combined single axis vibration test system

Applicable to temperature and humidity environmental testing for products which may be exposed to ultra-high temperature up to 900 °C. Employs the virtual point control method to control acceleration of the specimen in the chamber without accelerometers mounted.



#### 3-axis simultaneous vibration test system

Simultaneous 3-axis vibration test system designed for earthquake resistance test and earthquake regeneration. Vibrations in three directions can be simultaneously applied to the specimen.



#### Compact chamber combined vibration test system

Function tests and durability tests of parts exposed to sudden temperature change are possible.

# Customised Products Electronic Parts

**Case Studies** 



#### Sensor calibration vibration test system

Pure single-axis vibration which is very hard to generate with a conventional single-axis system. 4 vibration generators are located orthogonally to the major axis to cancel unwanted cross-axis acceleration.




#### High frequency vibration test system

Combining 4 low-noise compact vibration test systems with a chamber and using multi-point control, vibration excitation combined with a climatic test is achieved from 2 kHz up to 10 kHz.



#### Environmental test system

Large area heat resistance glass  $(-40^{\circ}C - 110^{\circ}C)$  is provided for checking the specimen inside the chamber during a combined test. To reduce the required installation space, a guide rail system is used with for the vibration test system and horizontal slip table.

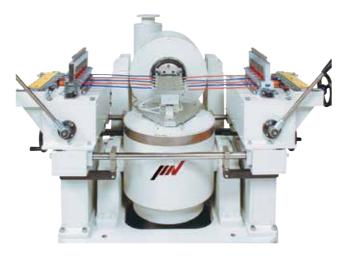

#### Crimping terminal evaluation system

Setup time is reduced with a dedicated fixture for various sizes of crimping terminal. 8 to 20 samples can be evaluated at one time.

# Customised Products Transportation Test Case Studies

#### Underslung 6-DOF vibration test system (Railway testing)

A combination of 10 vibration generators (6 vertical and 4 horizontal) and a 4,000 mm by 3,500 mm large-scale moving table allowing simultaneous, multi-point vibration testing. This versatile vibration platform is ideal for testing large items such as railway carriage parts and fuel cells.



#### 3-axis large vibration test system for transportation simulation

Vibration test system for very large specimens. Moving table size is 3,000 mm × 2,000 mm composed of 2 off 125 kN shakers for the X and Y axes and 2 off 60 kN shakers for the Z axis.



#### 3-axis simultaneous vibration test system

Simultaneous, multi-axis vibration data acquisition with IMV's vibration measurement unit built in to a railway container. Data is subsequently used for a real waveform 3-axis simultaneous vibration test.







#### 2-axis large vibration test system

Table size 2000 x 2500 mm, Maximum load 2000 kg. Transportation test for large specimens or vibration durability test.

## **Customised Products** Construction Machinery

**Case Studies** 




#### Energy saving type vibration test system with large size slip table

Maximum load is 2,000 kg. (when used with the lateral load reinforcement guide or slip table). The built-in automatic ECO function optimizes power consumption across all vibration test types.



#### 3-axis changeover vibration test system

Once the specimen and fixture are set, it is possible to switch the X/Y/Z axis excitation automatically. No time is spent remounting specimens or assemblies. Tests can be easily continued without time loss.

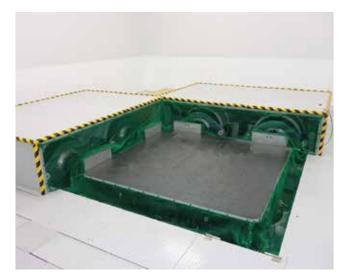

#### 6-D0F vibration test system


Durability testing with real measured waveforms for excavator cabins or heavy machinery tanks. The system reproduces vibration in X,Y, Z axes as well as roll, pitch and yaw.



#### Large vibration test system for high frequency testing (up to 5000 Hz)

For high-frequency tests with large specimens. The slip table can be replaced according to the size of the specimen and each table can be used for high-frequency testing.



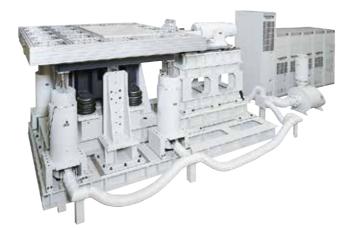


#### Large scale earthquake resistance vibration test system

The unique hybrid method achieves accurate reproduction of both large-displacement and high-frequency waveforms by utilising the benefits from an electrodynamic vibration generator and an AC servomotor.



Watch the

YouTube video

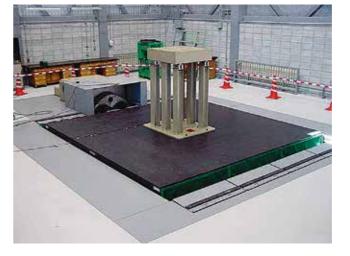

#### Large 2-axis simultaneous, multi-point excitation vibration test system

Large vibration test system with a table size of 4500 mm × 4500 mm. Rated displacement: 400 mm peak-to-peak horizontal, 200 mm peak-to-peak vertical. Maximum load of 20 ton.



#### Large scale earthquake resistance vibration test system

An industry first, hybrid technology low-frequency vibration test system which simulates highly accurate waveforms including high- and low-frequency components simultaneously with an electrodynamic shaker and AC servomotor.



#### Earthquake resistance vibration test system for seismic switches

Hydraulic bearing (Type TT) makes it possible to achieve a waveform reproduction error ratio within 2% using only 2 or 3 drive signal updates.

Maximum displacement: 150 mmp-p Frequency range: 0.5 - 20 Hz

#### Watch the YouTube video



## **Customised Products Aerospace**

**Case Studies** 



#### 350 kN large water cooled vibration test system

Watch the YouTube video

One of the world's largest excitation force systems, with a distinctive 76.2 mm p-p (3 inches) alternative displacement rating.

High-velocity shock tests of 3.5 m/s are also possible.



#### Vibration test systems for clean rooms

The air inlet and outlet for the shaker are ducted from outside of the clean room; this maintains the cleanliness of the room.



#### Large-scale 200 kN vibration test systems for the aerospace industry

With low displacement requirements for the aerospace industry, this system is fitted with a Team slip table using the T-Film bearing. High over-turning moment and low cross-axis acceleration are features of this system in both vertical and horizontal operation.



#### Multi-point, multi-axis vibration test system

Multi-point vibration test system with three-axis simultaneous excitation. The system has the capability to carry out tests of very long specimens over a high frequency range.

### **Customised Products etc.** Other Applications **Case Studies**



#### Vibration test system for fatigue testing of copper plate

Especially developed for the fatigue testing of copper plating by customizing a compact shaker from IMV's m-series. Simultaneous testing of 12 sheets of copper plating is possible with this compact system.



#### Vibration test system with acid-resistant table

A standard specification slip table with alumite coating (as an example) is not suitable for vibration testing in the battery industry due to damage caused by leaking battery chemicals. A specially-formulated coating for the slip table is applied which is resistant to battery leaks.



#### Compact vibration test system for sensor calibration

This system realizes low distortion in low-frequency and low-acceleration areas and is used as a calibrator at JQA and other public institutions.



#### Pressure-proof flexible duct endurance test

The neutral position of the horizontal slip table can be adjusted and the slip table displacement is controlled as well. This allows a specimen to be permanently and rigidly fixed on one side and mounted on the slip table on the other side.

For installation of vibration test systems

#### Basic units used for vibration test

There are four important units for a vibration test. Force [N], Acceleration [m/s<sup>2</sup>], Velocity [m/s], and Displacement [mm peak-to-peak (p-p)]

The force "F" required to give an object of mass, "m" acceleration "A" is;

		SI units	Gravitational units
E-mA	F : force	[N]	[kgf]
F=mA	m: mass	[kg]	[kg]
	A : acceleration	[m/s <sup>2</sup> ]	[G]

[kgf] [kg] [G] [m/s<sup>2</sup>]

That is to say, when a mass of 1 kg is accelerated to an acceleration of 1 m/s<sup>2</sup> the required force is 1 N. Gravitational acceleration "G" equals to 9.8 m/s<sup>2</sup>.

To describe vibration, frequency and vibration level need to be specified. Vibration is a form of movement; with a consequent relationship between acceleration, velocity and displacement. To describe vibration level, any of these units can be used. Here are the relationships between each of the units

We have an object moving in a sine wave.

The displacement is;

D = D0 sinωt

The velocity is obtained by differentiation of the displacement. Therefore

 $V = \frac{dD}{dt}$ 

 $V = \omega D0 \cos \omega t$ 

The acceleration is obtained by differentiation of the velocity. Therefore;

Δ	_	uv
Л	-	dt

 $A = -\omega^2 D0 \sin \omega t$ 


As we substitute

 $\omega = 2 \pi ft$ 

We have formulae indicated only in amplitude;

$V = \omega D = 2 \pi f D$	D:Displacement	[mº-p]
$A = \omega^2 D = (2 \pi f)^2 D$	V:Velocity	[m/s]
	A:Acceleration	[m/s <sup>2</sup> ]

The following diagram shows waveforms for displacement, velocity and acceleration.

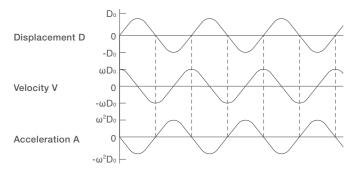

We get the formulae below by transforming the above formulae

 $f = \frac{A}{2 \pi V}$  $A = \frac{V^2}{D}$ V = 2 πfD  $D = \frac{A}{(2 \pi f)^2}$  In the field of vibration test, we use mm p-p for the peak to peak displacement.

Therefore

 $D = \frac{d}{2000}$ 

is substituted in to all of the above formulae

$      f = \frac{A}{2 \pi V} $ f:Frequency [Hz] $      A = \frac{(2 \pi f)^2 d}{2000} $ A:Acceleration [m/s <sup>2</sup> ] $      V = \frac{2 \pi f d}{2000} $ V:Velocity [m/s] $      d = \frac{2000 A}{(2 \pi f)^2} $ d:Displacement [mmp-p]

The following is an example

```
[ex] i) f = 50 [Hz], d = 2 [mmp-p]
                   V = \frac{2 \pi f d}{2000} = \frac{2 \times \pi \times 50 \times 2}{2000} = 0.314 \text{ [m/s]}
                                               2000
                   A = \frac{(2 \pi f)^2 d}{4 \pi^2 \times 50^2 \times 2} = 98.7 \text{ [m/s^2]}
                              2000
                                                 2000
            ii) A = 100 [m/s<sup>2</sup>], V = 0.5 [m/s]
                   f = \frac{A}{2 \pi V} = \frac{100}{2 \times \pi \times 0.5} = 31.8 \text{ [Hz]}
                   d = \frac{2000 V^2}{1000 V^2} = \frac{2000 \times 0.5^2}{1000 \times 0.5^2} = 5 \text{ [mmp-p]}
                                                  100
```

Please see the conversion chart (Exchange table) on page 74 for calculation

### About [dB]

We use "dB" as a unit when describing the proportional relationship of physical quantities. Especially, in cases where one value is thousands or millions times a multiple of a reference value, then we use the logarithmic scale "dB" instead of a linear scale. This makes the values more sensible and is an industry standard practice. "dB" is expressed by the following

A1 = Comparison value a = 20 log  $\frac{A_1}{A_2}$  [dB] A<sub>0</sub> = Reference value

One million times is ;

 $a = 20 \log \frac{1,000,000}{1000} = 120 [dB]$ 

Not only does dB reduce the number of digits (smaller numbers to handle) but also simplifies calculations. For example, adding 25 dB and 30 dB makes 55 dB but if you do it in a linear way ;


```
25 [dB] = 20 log A A = 10^{\frac{25}{20}} = 17.78
30 [dB] = 20 log B B = 10^{\frac{39}{20}} = 31.62
AxB = 17.78 x 31.62 = 562.3 = 20 log 562.3 = 55 [dB]
```

Now you see you can use addition instead of multiplication by using "dB". That is to say, it is very easy to calculate by using "dB". The following is a conversion table for "dB" and multiple.

dB	0	0.1	1	3	6	10	20	30	40	60
Multiple	1	1.01	1.12	1.41	2.0	3.16	10	31.6	100	1000
dB	0	-0.1	-1	-3	-6	-10	-20	-30	-40	-60
Multiple	1	0.99	0.891	0.709	0.501	0.316	0.1	0.0316	0.01	0.001

#### Use of a logarithmic graph

We often use a logarithmic graph when we need to plot data for vibration testing or other physical phenomena.

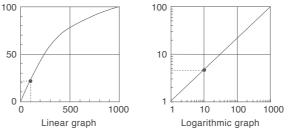



67

On the linear graph, we can read 20 for Y when X is 100. But we can hardly read Y when X is 10 or 1. Whereas on the logarithmic graph, we can read the value even if it is 1/100 or 1/1000 of the maximum value. We use a logarithmic graph for such benefit.

#### Sine test graph

We often use the graph below when running a Sine vibration test. This is a log-log graph that was discussed above. Asymptotes of constant displacement, velocity and acceleration are shown. Here is an example of an asymptote of constant velocity. From the formulae we learned before

$$A = 2 \pi f V$$

$$A = 2 \pi f V$$


$$F = 2 \pi f V$$

$$F = 4 \pi f V$$

From this equation we can read that acceleration A is increased 10 times when frequency f is also increased 10 times. On the graph below, we see that the acceleration increases to 100 m/s<sup>2</sup> from 10 m/s<sup>2</sup> as the frequency increases from 10 Hz to 100 Hz. In the case of constant displacement

A = 
$$(2 \pi f)^2 D$$
 D : Displacement

The equation shows that acceleration A is increased by 100 (10<sup>2</sup>) times when the frequency f is increased by 10 times. Acceleration being proportioned to the second power of Displacement. On the graph below, we can read that the acceleration increases to 100 m/s<sup>2</sup> from 1 m/s<sup>2</sup> as the frequency increases to 10 Hz from 1 Hz.

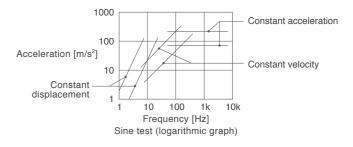

The graph shows the asymptotes when velocity or displacement stays constant.

For installation of vibration test systems

#### Vibration insulation for a vibration generator

When using a vibration generator, the vibration is transmitted to the building and other facilities through the floor.

Particularly in the frequency range of 2 Hz to 20 Hz, even a small proportion of vibration from the vibration generator can have a large effect on buildings because they have their own resonances in this frequency range.

Therefore, a vibration generator needs a vibration isolation system. The following shows some examples.


jump up and down

#### 1) No insulation



#### **F**·Force All the force generated by the vibration system is transmitted in to the floor. This may excite resonances in the buildings and other facilities. The vibration generator itself may sometimes

#### 2) Body suspension




#### Air sprinas IMV uses this method of vibration isolation except for the small, compact shaker range.

displacement when the operating frequency is low See "Limitation of maximum displacement"


This may limit a shaker system's maximum

#### 3) Bottom suspension



This has a similar effect of vibration isolation but it can also cause lateral motion at low frequency


#### 4) Isolated foundation

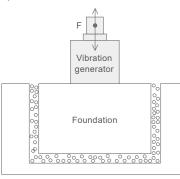

This is the best way of vibration isolation. Generally, the mass of the foundation block should be at least ten times heavier than the rated force of the system. Typically, the mass of the foundation should be twenty times heavier. If you are interested in this method of isolation, please contact IMV

#### Limitation of maximum displacement

There are several methods for vibration isolation. All of these ways bring limitations on maximum displacement. In the case of body isolation, the vibration generator body reacts against the movement of the specimen.

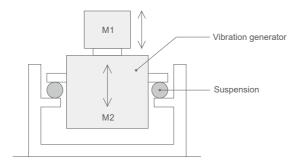

In the case of body isolation, the vibration generator body will be excited by the reaction force. If the shaker excitation frequency is 2-7 Hz, this may coincide with the resonant frequency of the armature suspension system and the body suspension system. The armature and body motion could be almost in "anti-phase" resulting in the absolute value of the available armature displacement becoming severely limited.

Typically only 10 mmp-p displacement is available from a 51 mmp-p rated vibration generator.


If using an "isolated foundation", the effective mass of the foundation plus vibration generator body could be much heavier than specimen+armature assembly. Therefore, limitation for the available displacement becomes negligible.

#### Noise control

When the vibration test system is installed, it is necessary to think about the noise. There are several sources of noise such as excitation noise, suction noise (for air-cooled systems), blower noise, blower exhaust noise and cooling fan noise of the power amplifier etc.

The shaker excitation noise might exceed 100 dBA at a typical maximum acceleration of 980 m/s<sup>2</sup>. The suction noise is about 90 dBA, and blower noise + blower exhaust noise is about 80 dBA. However, these figures can differ depending on the shaker model.

1) Installing the blower outside the room

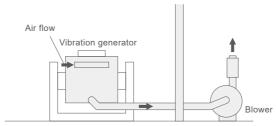


This is generally a simple method.

The blower noise and the blower exhaust noise are reduced in the test area. However, this method doesn't change the suction noise or the excitation noise of the vibration generator. \* The blower cannot be installed outdoors.


#### 2) Sound proof box

#### A. Vibration generator and blower

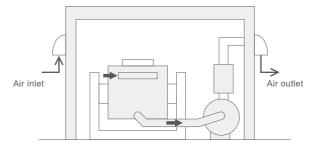

This method reduces the excitation noise and the blower noise. \* During the blower is stopped, it is recommended to make treatments to prevent air backflow

#### B. Vibration generator only (blower is outside the room)

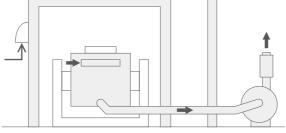


The excitation noise and the air inlet noise are lowered It is recommended to place the blower outside.

\* The blower cannot be installed outdoors

69 For installation of vibration test systems

#### C. Sound proof box only for the blower

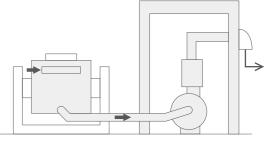


The blower noise is reduced

This method doesn't change the suction noise nor the excitation noise of the vibration generato

\* During the blower is stopped, it is recommended to make treatments to prevent air backflow.

#### 3) Concentrated suction type




The suction noise of the vibration generator falls by about 5 dBA. The main purpose of concentrated suction is to take air from the outside without using the air in the room to cool the shaker (typically used for clean rooms etc.) \* The blower cannot be installed outdoors

Mechanism of vibration test systems

#### Mechanism of vibration test systems

#### Electrodynamic vibration test systems


The principle is similar to the audio systems where electronic signals from different sources (i.e CDs) are amplified and converted to sound by loud speakers. For the vibration test systems, the vibration generators correspond to the loud speakers of the audio systems. They have the vibration controllers instead of the sound source to drive the vibration generators feeding the electric current through the amplifiers. The difference is that the signals from the transducers mounted on the specimens and/or vibration tables to monitor their motions are fed back to the vibration controllers in order to control the vibrations to meet the requested test conditions.

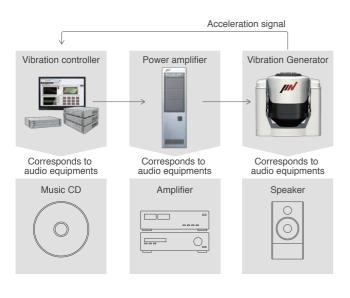

#### Vibration generator

The operation principle is based on "Fleming's left hand rule". When an electric current flows in a wire put in a magnetic field, it gets a force perpendicular both to that field and the direction of that current.



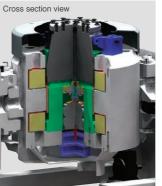

#### Vibration controller

The original waveforoms will not be reproduced by just applying the vibration data obtained in the field or form test specimens. The waveforms will be totally defomed due to the characterisitics of the amplifiers, combined dynamics of the vibration generators and test specimens. The vibration controllers the equipments to have the vibration generators generate the designated vibration compensating automatically these characteristics or dynamics. All IMV vibration controllers are customised for each of our clients in order to meet their particular needs. "User Friendly" has been always pursued.




#### Power amplifier

The role of the power amplifier is to feed driving current to the vibration generator converting the small electrical signal generated in the vibration controller to the large current of higher voltage. IMV's power amplifiers employ the switching amplifier system. They use mainly the compact and highly efficient power modules of the top level in this industry to contribute to energy and space saving.




#### Principles of operation

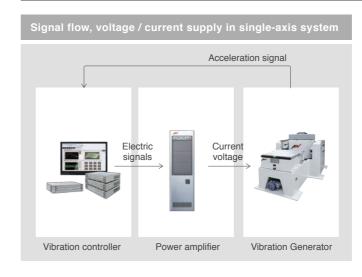

#### Vibration generator

The operation principle is based on "Fleming's left hand rule".

#### The formula below represents the Fleming's left hand rule.

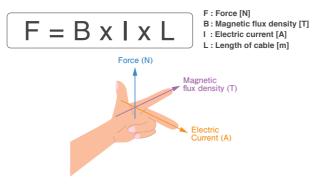

#### Cooling method of vibration generator

The vibration test system can employ either of two methods to cool : air or water cooling. Each method has its own key features. Selecting a cooling method that meets to your installation requirements based on the key feature as below.


Cooling method	Air cooling	Water cooling
How to cool	Cools the coils by using air from outside. Forces exhaust by blowser.	The coils are made of pipe and distilled water is circulated to cool the coils using a heat exchanger and a cooling water.
Key feature	Employs only a blower as cooling equipment. Easy to install.	Operation noise is significantly lower compared to air cooling.
Points to ponder	Duct connection or soundproof treatments may be necessary to reduce suction noise from the vibration generator and exhaust noise from the blower.	A primary cooling water facility is necessary.

#### Power amplifier


A power amplifier in the system supplies electric power to the vibration generator. The power amplifier generates higher current of higher voltage in response to low power electric signals from the vibration controller.



71

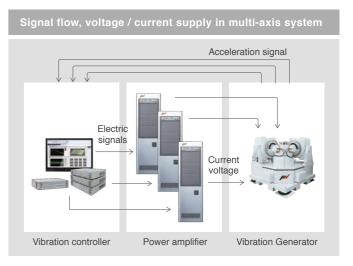

# Inside of vibration generator (Air cooling method)



Invention with IMV's originality

## **Conversion Table**

Relationship between frequency, displacement, velocity and acceleration in sine vibration testing


#### Original technology utilised to improve durability and performance of vibration generators

#### Upper (armature) support system PS guide

Vibration generator receives a dynamic stress by its own vibration. The Parallel Support Guide (PSG) design is a patented one that can support the armature. PSG significantly improves durability, reliability of the system, and quality of vibration at the same time. This compact design provides




enough stiffness which exceeds such functions of roller support system and realizes high durability and self-holding supporting system by alternative alignment of gears that have a unique curve.

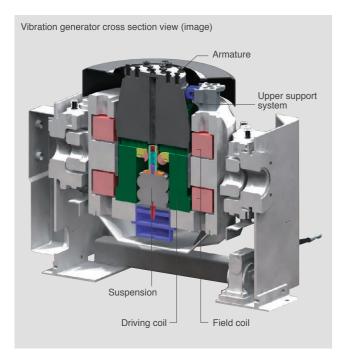

#### Large allowable eccentric moment

When the table working surface of the vibration generator is not wide enough to mount the specimen, it must be expanded using some fixture or auxiliary table. Large lateral rigidity of the table guidance systems is important, because it is hard to bring the center of gravity of the specimen on the center line of the vibration table. The larger the specimen is , its importance is increasing.

Our PS guidance system (Parallel Support Guide) realizes 130 % increase of rigidity over those of the same force range conventional models. It achieved that the specimens whose center of gravity are not located on the center line of the vibration table can be tested being applied higher acceleration.

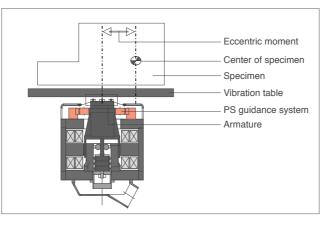

#### Compatibility of lateral rigidity and waveform regeneration accuracy


Usually lateral rigidity and waveform accyracy conflict each other. PS Guidance system achieved their compatibility. It realizes vibrations of lower waveform distortion with high fidelity.


#### Improvement of durability

10 times longer (compared to conventional system's) life was achieved to make much longer the interval of maintenance

#### Flexibility to respond to demand for large displacement tests

Flexibility is provided to respond to demand for 100 mm stroke vibration tests.

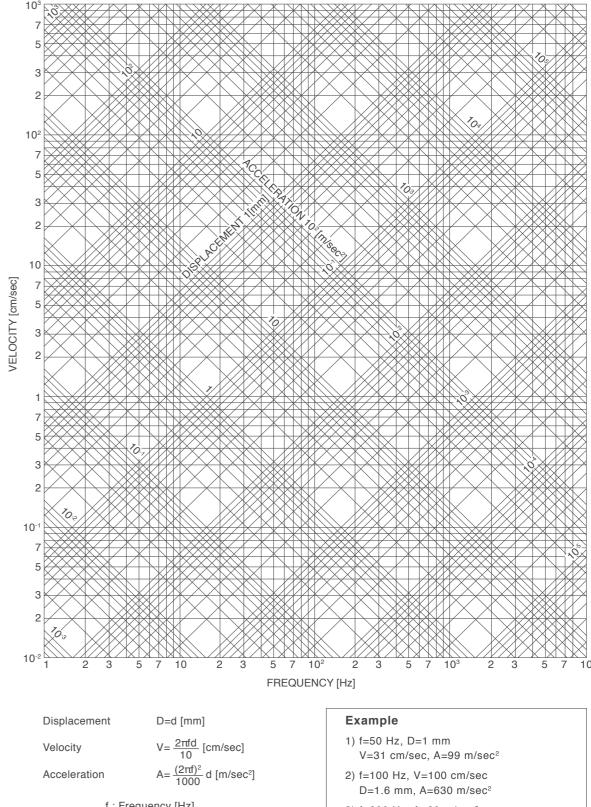



f : Frequency [Hz] Note: D,V and A are in single amplitude


3) f=600 Hz, A=60 m/sec<sup>2</sup> D=0.0042 mm(4.2 µm), V=1.6 cm/sec

## **Related Products**


#### **Piezoelectric accelerometer**

Since IMV has developed assembled accelerometers using in-house manufactured transducer elements, it is possible to offer a wide variety of piezoelectric accelerometers.


#### Small & light VP-02S

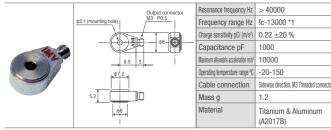


#### Wide temperature VP-32

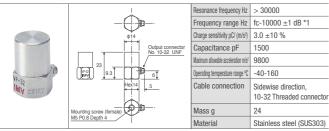

#### Micro VP-4M2Z

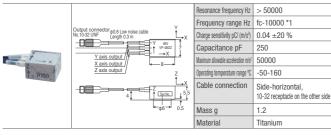

#### Small VP-A1P0

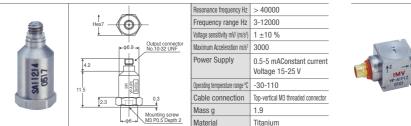

\*1 fc: To be defined by the time constant of amplifier


### Broadmotion sensor VP-8013/VP-8013S

Broad motion sensor, VP-8013, with the use of an original sensor module developed by IMV is enabled to measure and monitor vibration in wide frequency range which was not covered by single sensor of any conventional types.


#### Features

- 1. Covers from ultra low acceleration (0.04 Hz)\* up to high frequency mechanical vibration (1000 Hz) \*Actually the output starts from DC, performance confirmed range is from 0.04 Hz.
- 2. Compact design with three axis detection
- 3. Shock durability 10000 m/s<sup>2</sup>




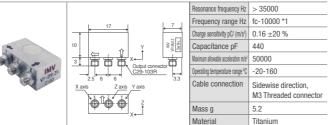


#### Micro VP-4M2

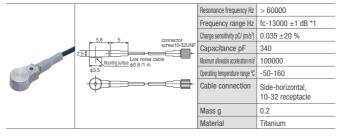

#### Light & high sensitivity VP-4132

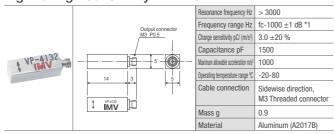

#### Small VP-A1P1Z

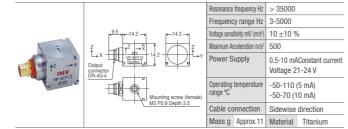

## **Export of Products**

Export of IMV vibration test system products

IMV CORPORATION has been registered by the Japanese Ministry of Economy, Trade and Industry (METI) regarding export controls as a company in good standing compliant with the Japanese export regulations for Electro-dynamic vibration test systems or the related products composing the test systems (hereafter, "IMV Vibration test system products") that are strictly controlled for export from Japan to end users and/or end use that concerns manufacturing or development of ordinal weapons and/or mass destruction weapons including any equipment to transport them. Therefore, IMV has the obligation to confirm to the ministry in Japan that the customers of IMV vibration test system products exported do not require an Export License (E / L) by the Japanese government. Therefore, IMV will ask customers to issue the following information and documentation to us in each of the following stages.

\*\* marked products in this catalogue require E / L.

#### Quotation request stage

IMV requires correct information about the address, name of the end user (including the name of department) and purpose of the end use of the products before we issue the price quotation of the products. Usually, the information is sent to IMV in writing through the sales representative for the end user. Please note that there is a possibility that IMV may not accept the inquiry because of the end user or the end use.

#### Order stage

Either an E/L of the Japanese government will be required to export the products from Japan or an E / L will not be required to export the products from Japan. In the former case, IMV will inform the end user of the required details etc. before accepting the order, because IMV has to apply for the E / L in Japan. In the latter case, IMV will always request the end user to prepare the "Certification of End User / End Use" after placing the order with the sales representative or IMV. The certificate is required by and will be requested by IMV.



#### Export arrangement stage

IMV has to obtain the E / L or the Certification of End User / End Use before our export arrangements are made for the products. If not, IMV will have to stop the export arrangements.

Please contact the sales representative or IMV should you have any questions regarding contents of the Japanese export control system or regulations.

\*Please note that optional software "Program K2" used for vibration controller K2 / K2 Sprint also requires Japanese government export license (E / L).

## **IMV Test Laboratory Network**

IMV's test laboratory network provides customers with full support

#### IMV offers a full service as the customer's partner of choice

Since 1988, IMV has been pioneering the test laboratory business in Japan. IMV opened six test laboratories in Japan and two overseas. IMV's test experts solve problems with the highest quality and using the most advanced test systems. IMV has worked on over 20,000 test projects.



#### Certified to ISO/IEC 17025

IMV's test laboratories are authorised and operating under quality control management systems in accordance with the international standard ISO/ IEC 17025, which specifies the testing capability and test laboratory calibration.

[Outline of Japanese	laboratory]
----------------------	-------------

(1) Certification number · RTI 04240 (2) Authorisation organisation: Public Interest Incorporated Association the Japan Accreditation Board (3) Authorisation date : March 15th, 2016 (4) Authorised field : Vibration test/shock, test/temperature, cycling test / vibration and temperature cycling test/ISO16750-3 TEST I (engine) and TEST IV (vehicle body)

[Outline of Thai laboratory]

(1) Certification number : 4784.01 (2) Authorisation organisation: A2LA

(3) Authorisation date June 26th, 2018 (4) Authorised field

: Vibration test (Sine), Vibration test (Random), Shock test, Temperature cycling test, Vibration and temperature cycling test, Temperature test (hot), Temperature test (cold), Temperature and humidity cycling test, Temperature and humidity static test

#### [Outline of Vietnam laboratory]

: VILAS 1284 (1) Certification number (2) Authorisation organisation: Bureau of Accreditation Vietnam (BoA) (3) Authorisation date March 2nd. 2020 (4) Authorised field : Vibration test (Sinusoidal), Vibration test (Broad band random), Shock test, Dry heat environmental test, Cold environmental test, Change of temperature test, Damp heat environmental test (steady), Damp heat environmental test (cyclic).

ĴАВ



#### e-Test Centre Japan

Focusing on solving problems for our customers, the latest test laboratory brings together Japan's technology for reliability evaluation. Companies complement each other, offering high value-added services such as precise analysis, proposing new test methods, development of new facilities and so on.

- Reliability evaluation test for e-mobility parts such as large-sized motor or inverter of EV/HEV
- Evaluation of large parts such as 100 kg, 1 m is possible while part is being operated
- · Various environmental tests such as high stress temperature cycle test or salt spray test
- Ultra-high temperature (900°C) chamber combined vibration test is available
- · Other tests perfomed in conjuction with specialised agencies
- · Full security system







Chamber combined vibration test system with a slip table

High stress temperature cycle test system

#### Advanced Technology Centre for Environmental Testing

To meet the future needs we installed a full range of vibration test systems for battry testing and very large specimens. ATC is a facility that takes into consideration the IT environment and the security of information based on ISO 27001.

- Installed Japan's largest vibration test system, 350 kN
- Lithium-ion battery testing for EV/HEV
- Installed a large earthquake resistance test system capable of reproducing earthquake waves
- · High velocity shock test is available
- · Full security system





The world's largest 350 kN vibration test system with a slip table

3-axis large earthquake resistance vibration test system





4102-142 Miyadera, Iruma, Saitama, 358-0014, Japan Tel: +81-4-2009-1043 Fax: +81-4-2009-1044 E-mail : info-etcj@imv-corp.com



Cyclic corrosion test system



Anechoic chamber






Chamber combined vibration test system with a slip Table

2193-28, Yatsusawa, Uenohara-shi, Yamanashi, 409-0133, Japan Tel: +81-554-62-6677 Fax: +81-554-62-6678 E-mail : info-uenohara@imv-corp.com



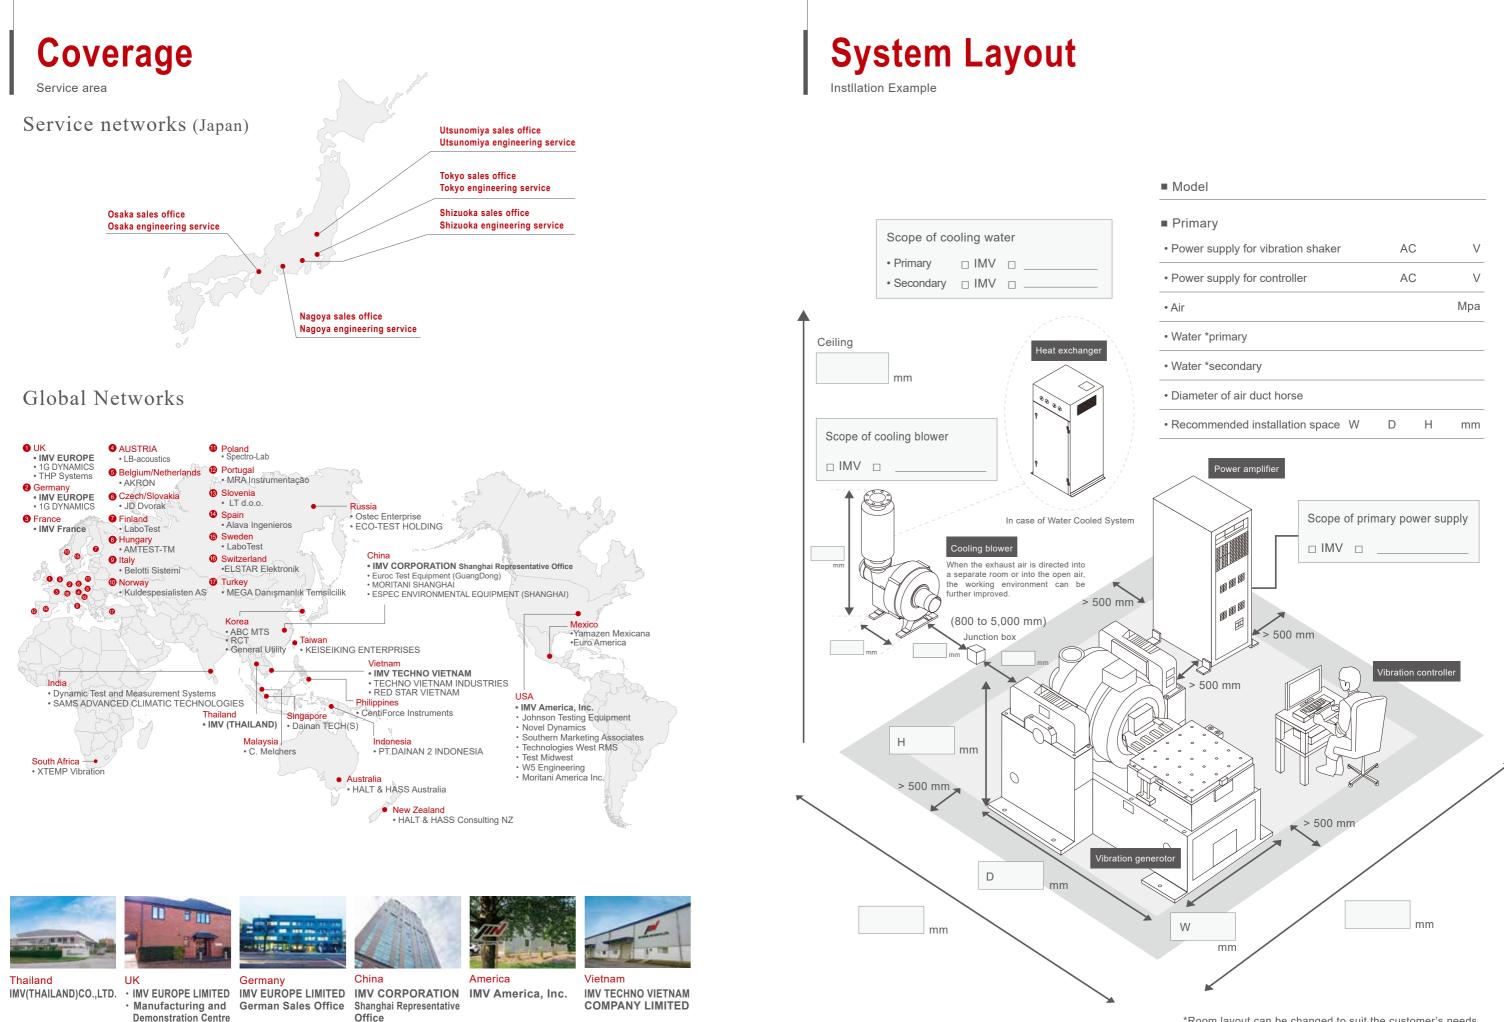



\*Room layout can be changed to suit the customer's needs.

## Memo







-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	_			 -	-	-	-	-	-	-			 	
-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	_		 	-	-	-	-		_			 	
-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	_	_	-	_	-	-	-	-	_			 -	-	-	-	-	_	_			 	
_	_	-	-	-	-	_	_	-	_	-	-	_	_	_	-	-	-	-	_	_	_	_	_	_	_	-	-	_	_		 	-	_	-	-	_	_			 	
_	-	-	-	-	-	-	_	-	_	-	-	_	_	_	-	-	-	-	-	_	_	_	_	_	_	_	_	_	_		 -	-	_	-	-	_	_			 	
_	_	_	-	-	_	_	_	_	_	_	-	_	_	_	-	-	_	-	_	_	_	_	_	_	_	_	_	_	_		 	_	_	_	_	_	_			 	
_	-	-	-	-	-	-	_	_	_	_	-	_	_	_	-	-	-	-	-	_	_	_	_	_	_	_	_	_			 -	_	_	_	_	_	_			 	
_	-	-	-	-	_	-	_	_	_	_	-	_	_	_	-	-	_	-	-	_	_	_	_	_	_	_	_	_			 	_	_	_	_	_	_			 	
_	_	_	-	_	_	_	_	_	_	_	-	_	_	_	-	-	_	_	_	_	_	_	_	_	_	_	_	_			 	_	_	_	_	_	_			 	
_	_	_	-	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_		 	_	_	_	_	_	_			 	
_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_			 	_	_	_	_	_	_			 	
_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_		 	_	_	_	_	_	_			 	
_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_			 	_	_	_	_	_	_			 	
_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_				 	_	_	_	_		_			 	
		_	_	_	_	_	_		_		_	_	_	_	_	_	_	_	_			_		_	_	_						_	_		_	_					
-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		-	-	_	-		-	-	-	-	_	_		 	-	-	-	-	-	_	_	_		
-	-	-	-	-	-	-	-	-	-	-	-	-		-	-	-	-	-	-		-		-	_		-	-	-	_	_		-		-	-		_	_	_		
-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	_			 -	-	-	-	-	-	-			 	
-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		 -	-	-	-	-	-	-			 	